



Uspa

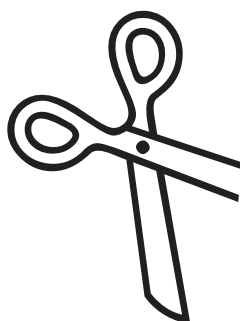






Min 14 cm

Max 20 cm





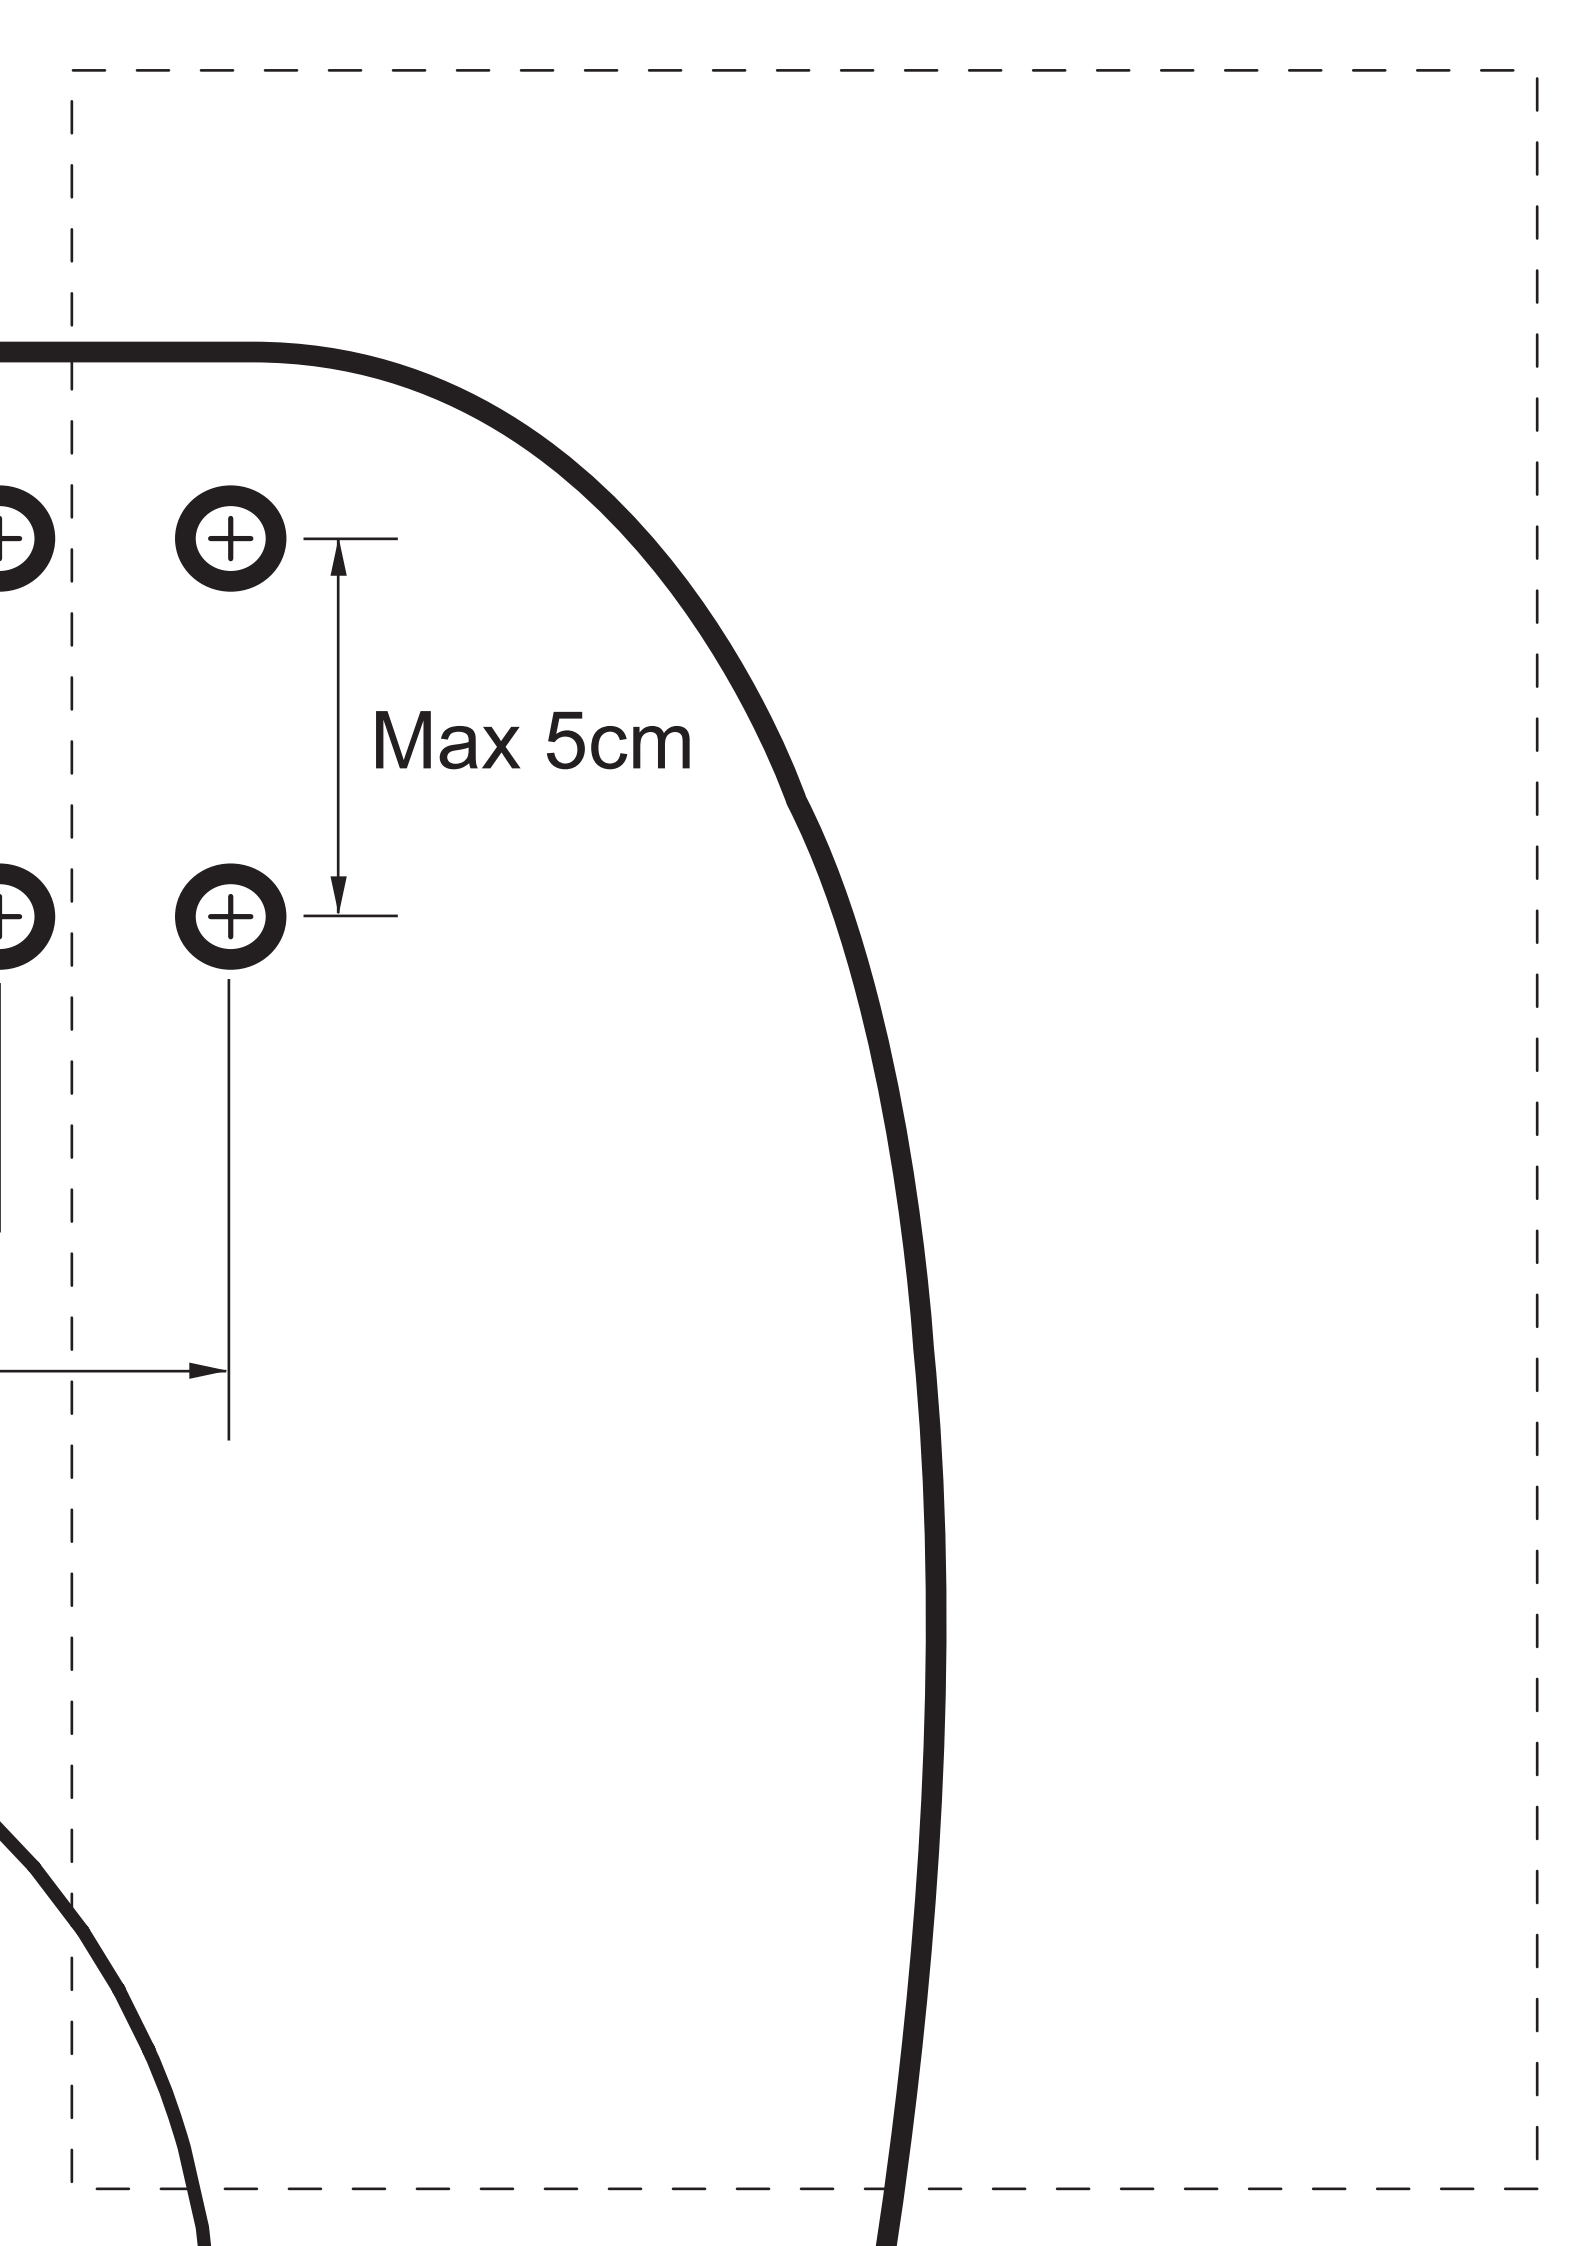

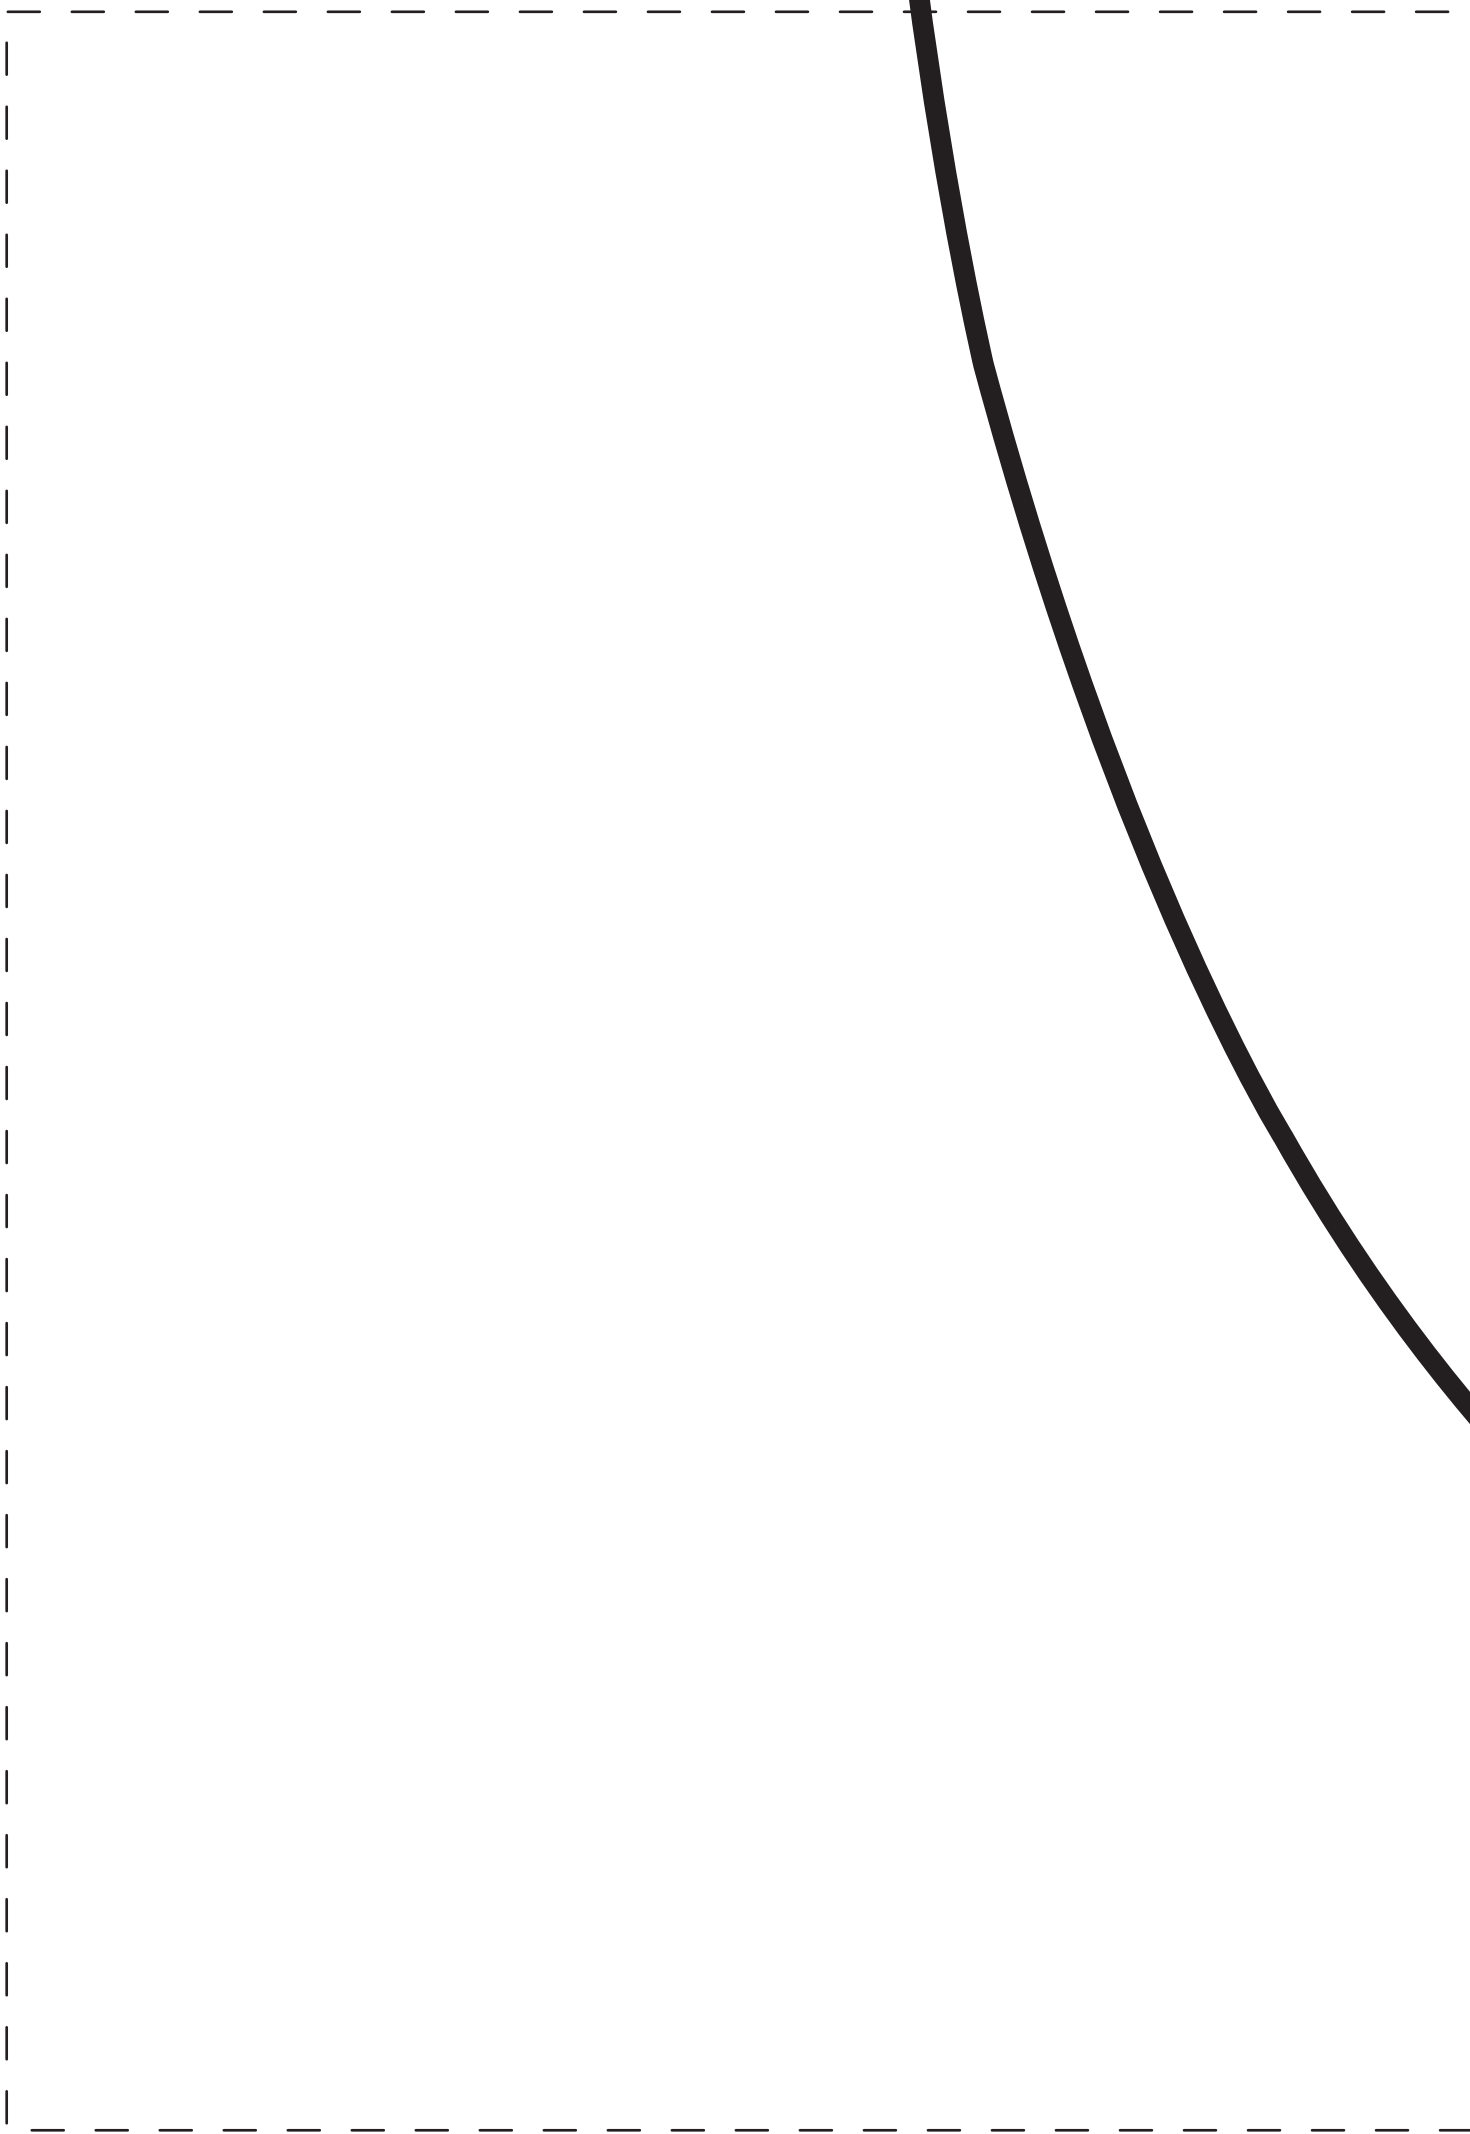

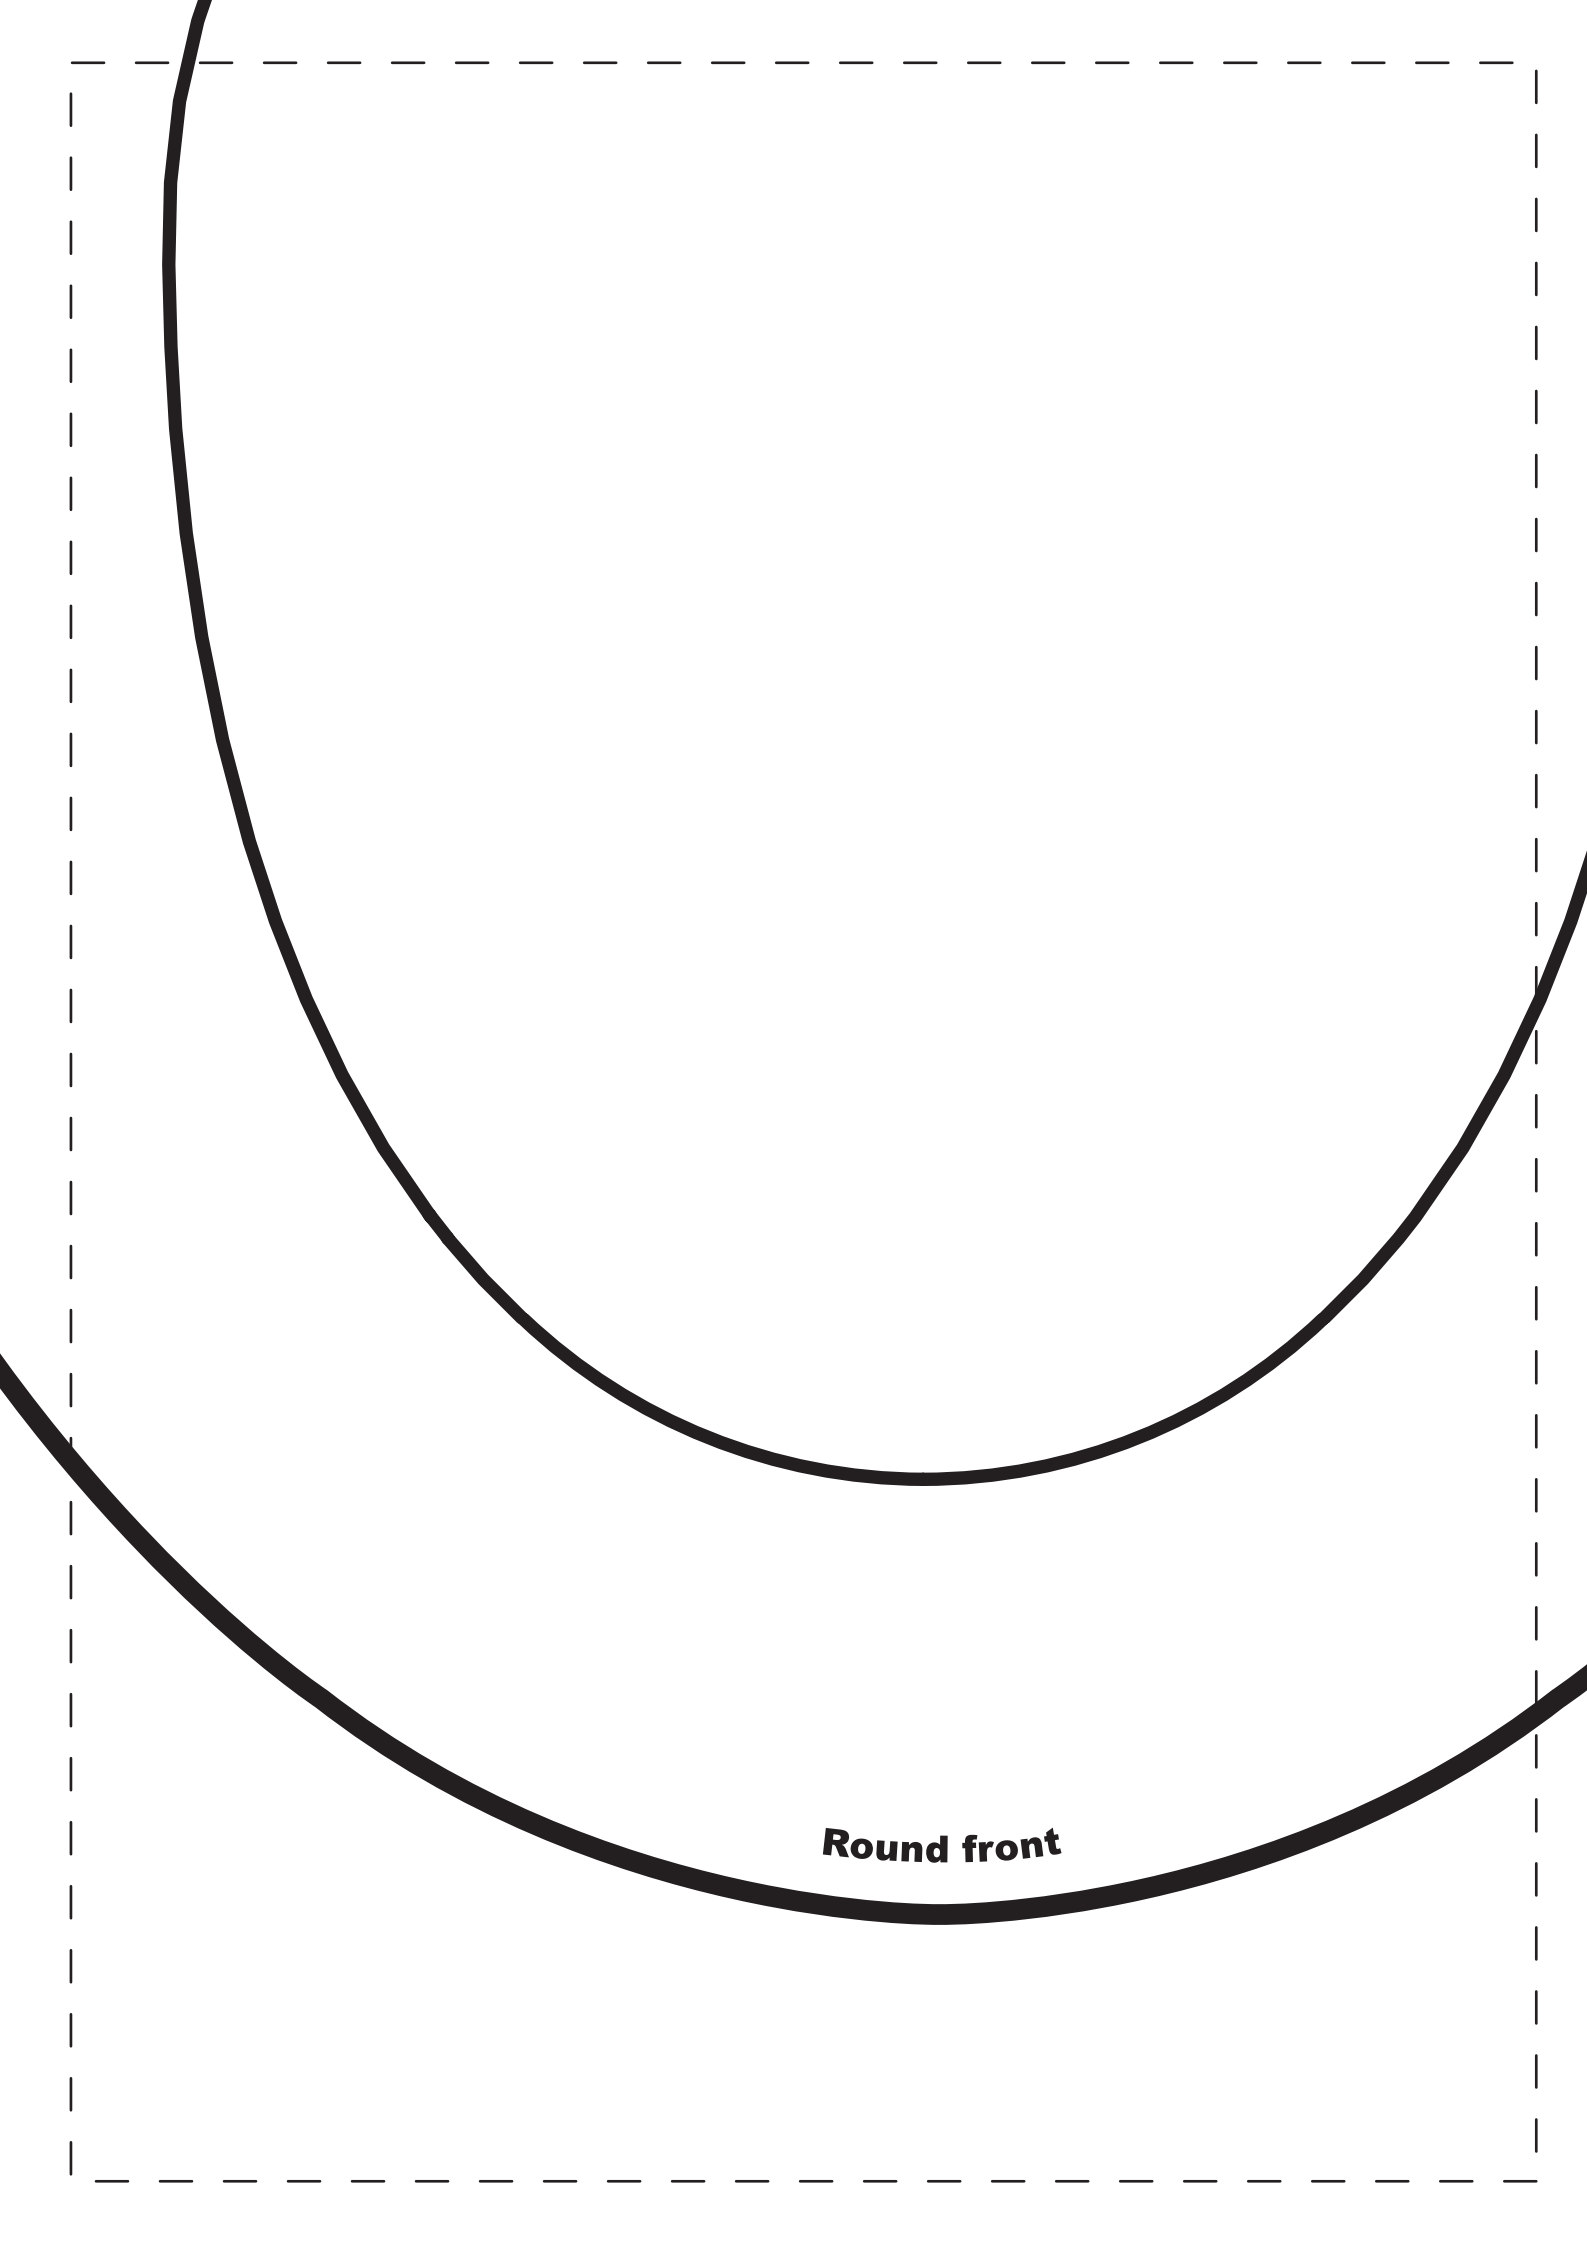

Round front

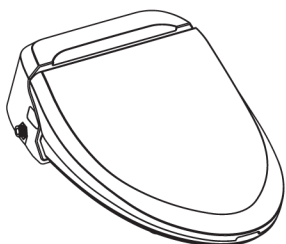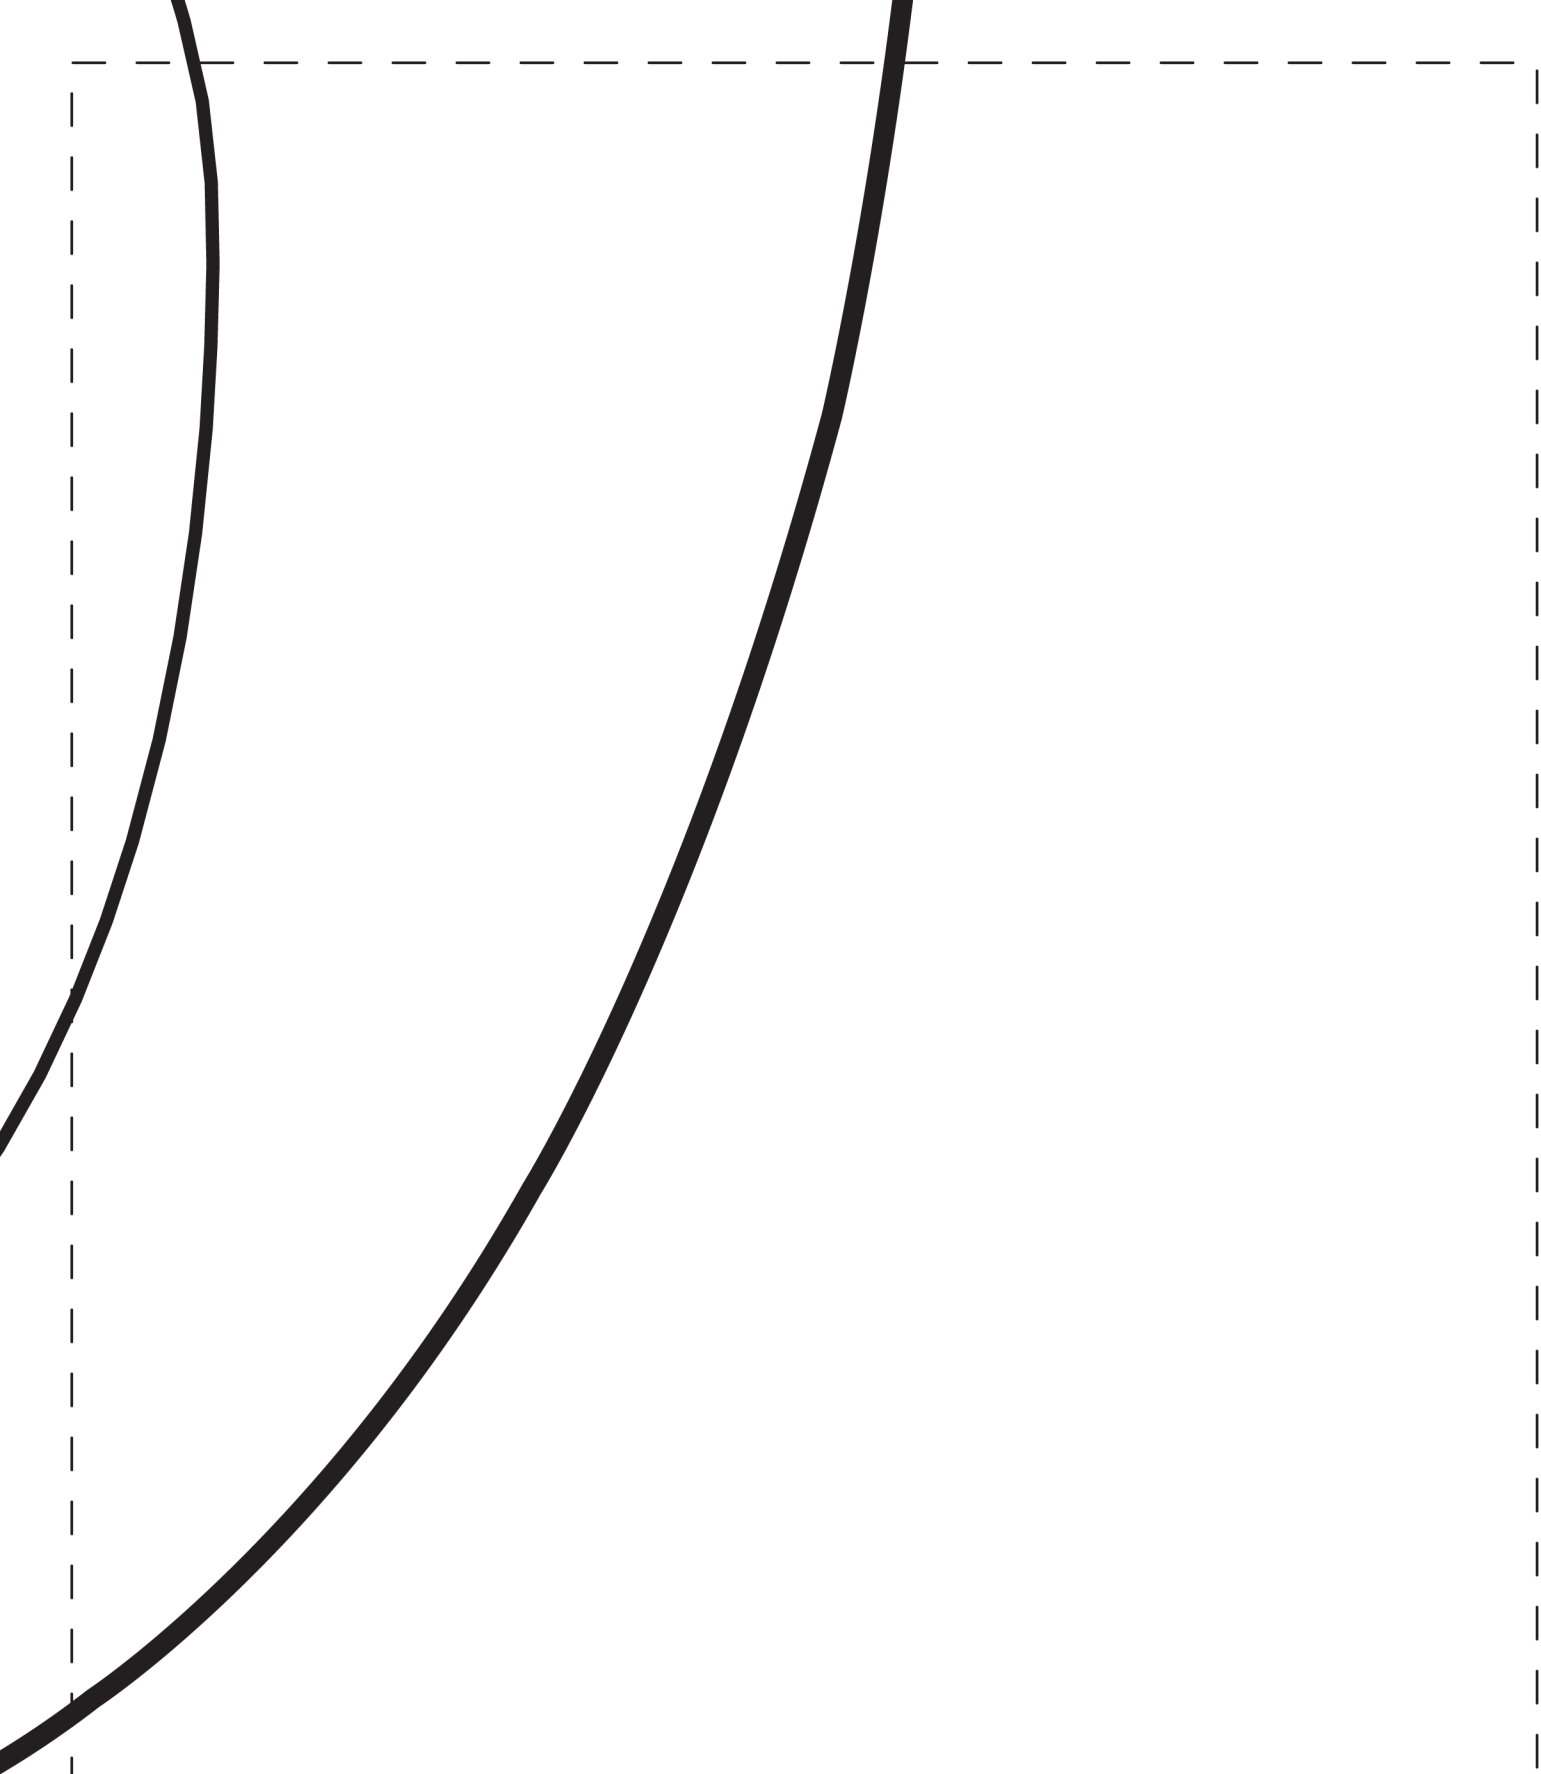

Place sheets together & line up
then sellotape together, remove
current toilet seat & place template
over toilet pan to assess fit