
Electronic Bidet

KAI-WC24 Operating Manual

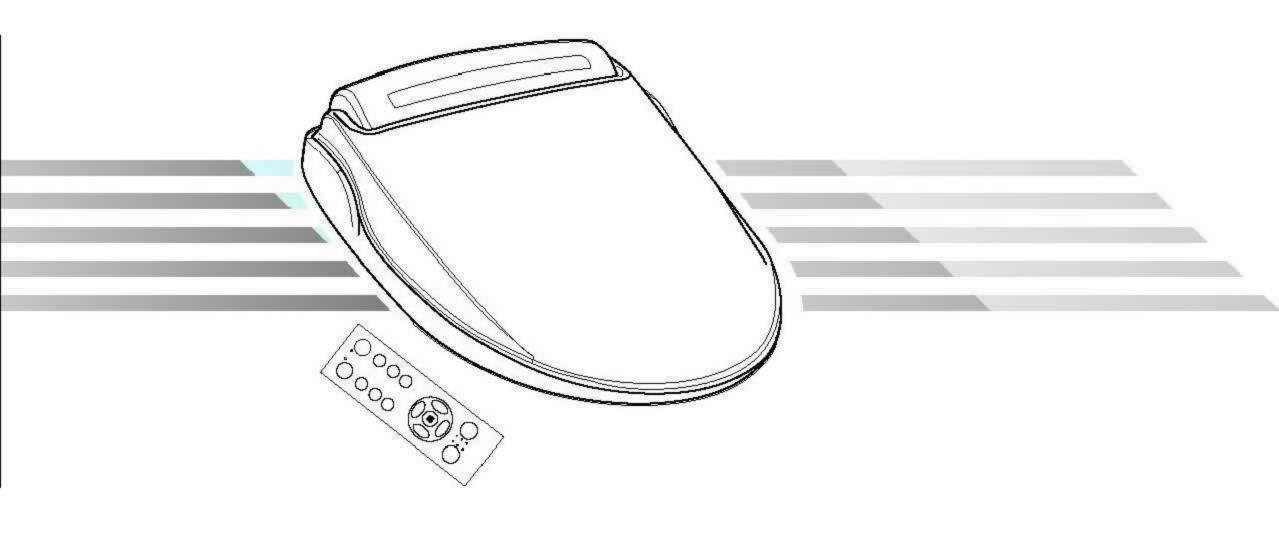

٠

Safety alarm & Attention & Product characteristic (1)

2 Product mix & name


1

5

Preparation



④ Installation methods	••••••	10	Methods of
5 Product disassembly		11	installation

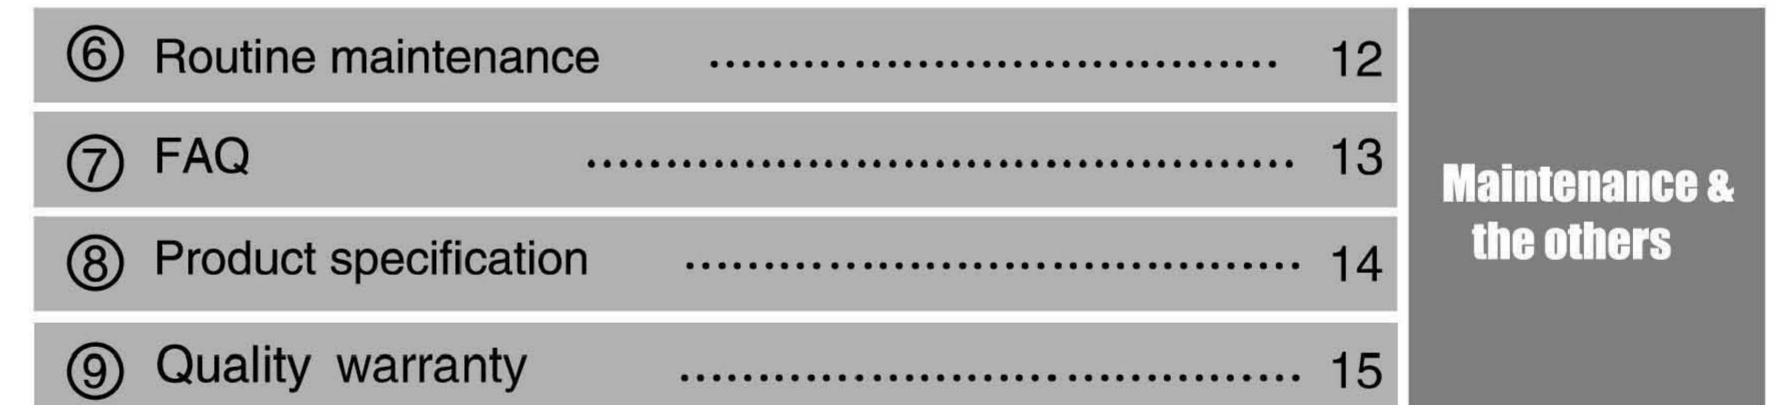





Please note: We reserve the right to amend and update the information contained in this cataloque with out prior notice.



Please read carefully prior to installation or use of this appaliancce. Failure to comply with these instructions could result in loss and or serious injury.

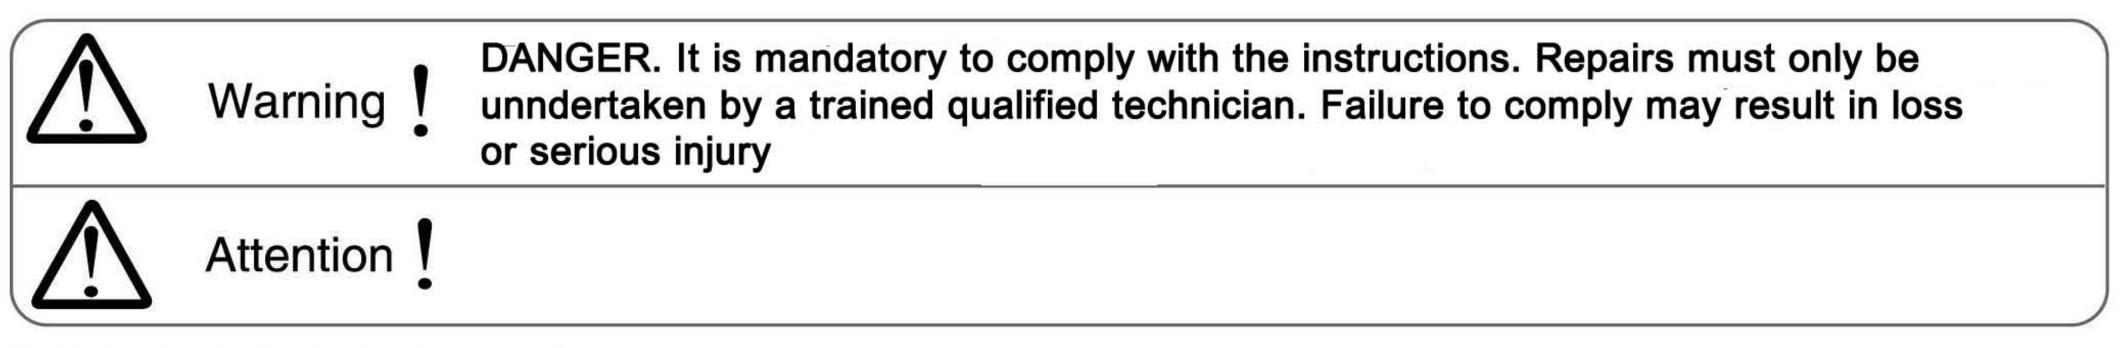

Following is the indication chart.

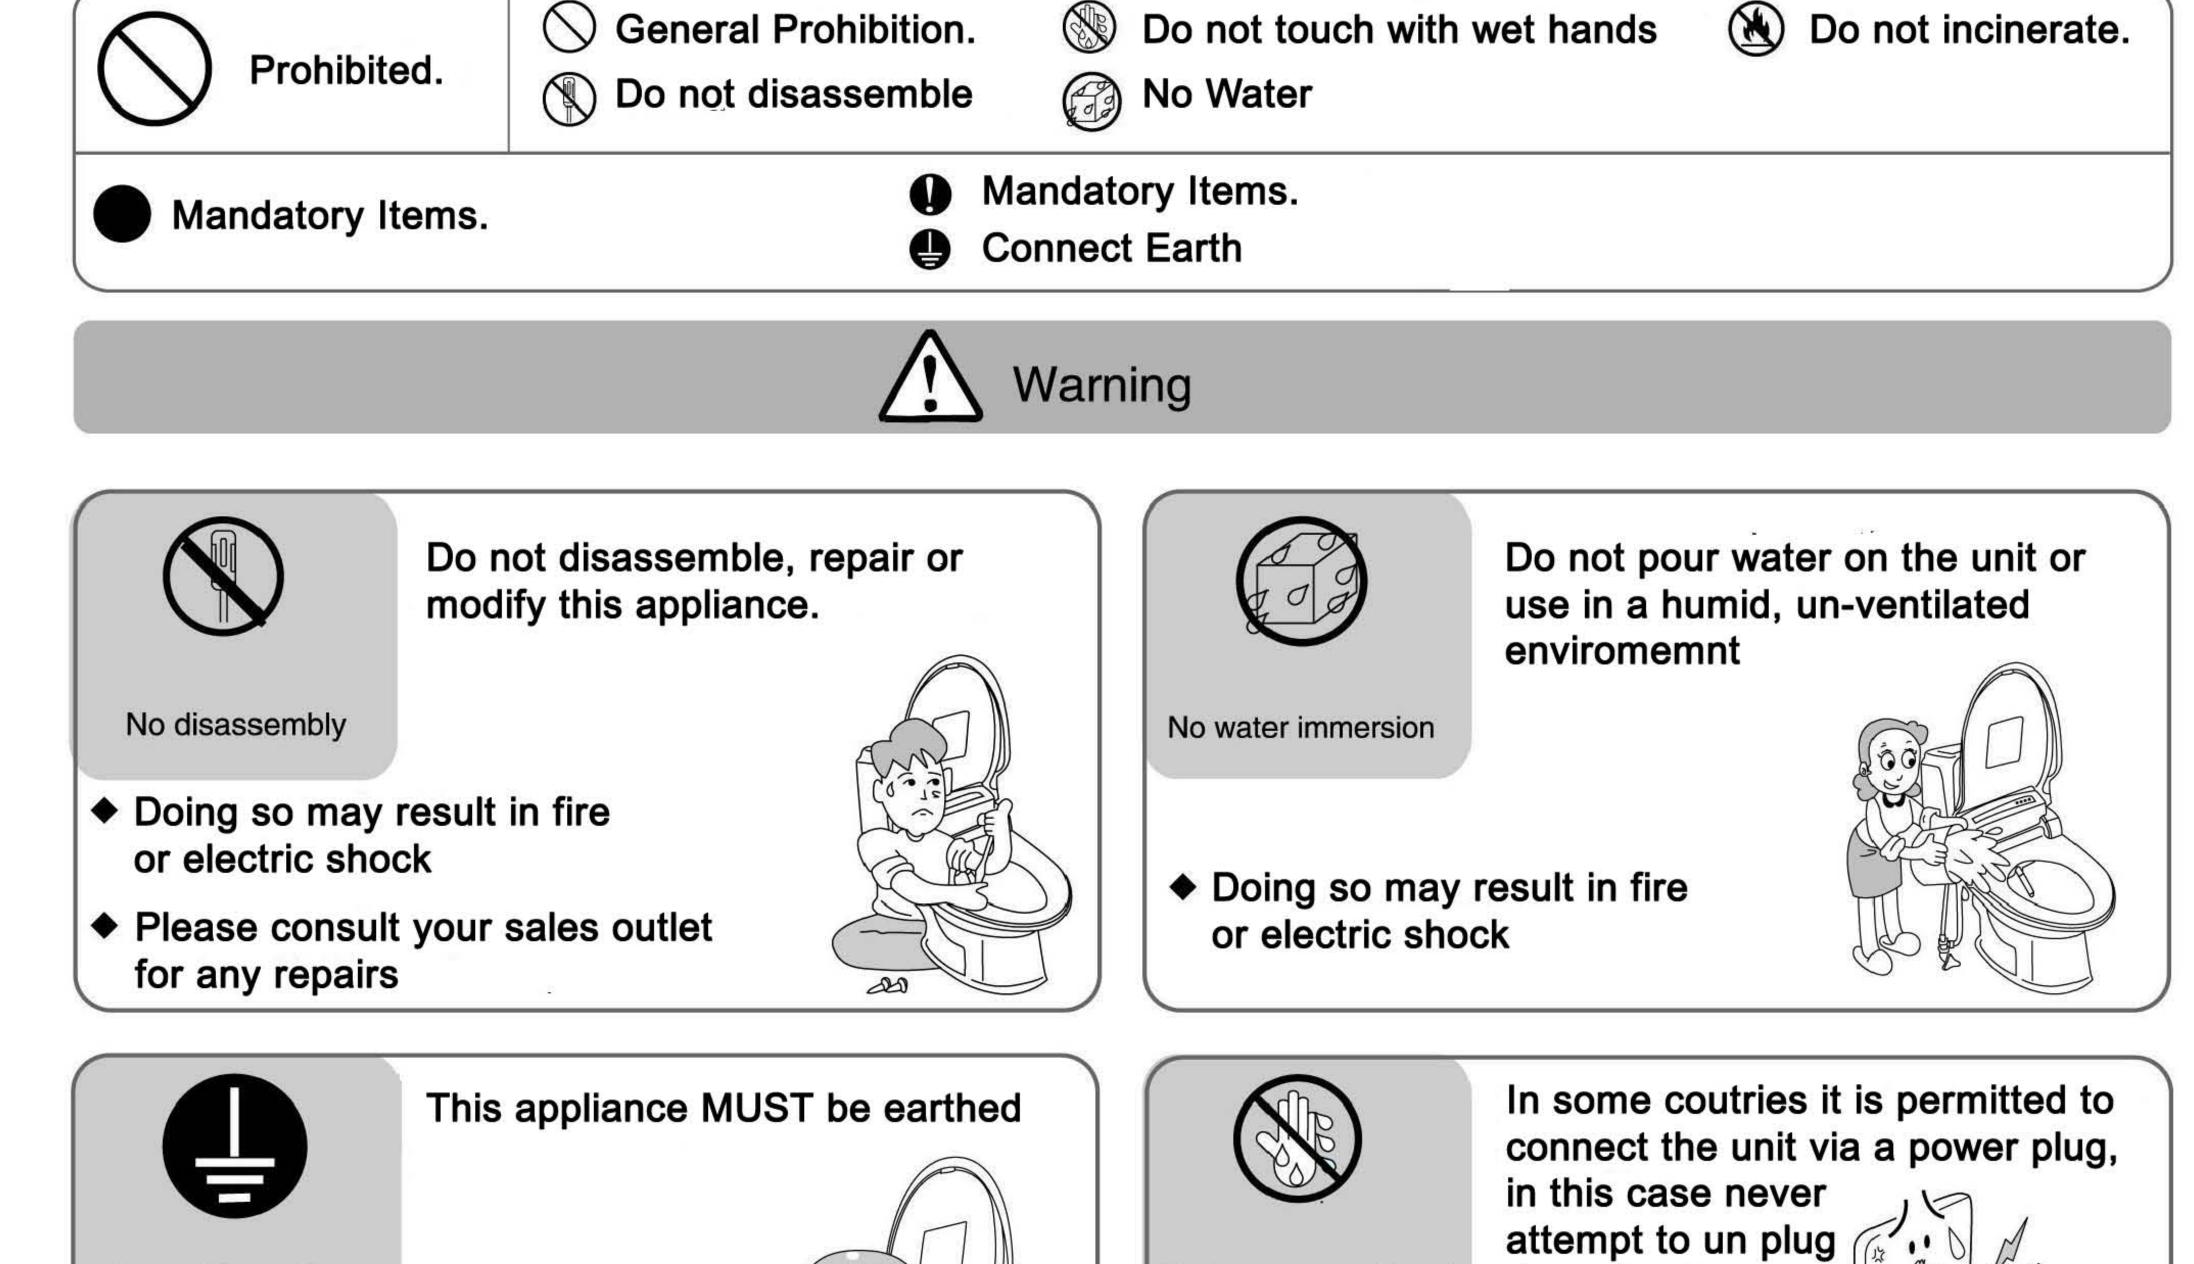





Connect the earth wire

Electric shock and injury may occur if the unit is not corrrectly earthed and tested prior to use







Do NOT connect the power until the unit is fitted in the correct position on the toilet and the water is connected and turned on.

Prohibition

Doing so may result result in fire and damage to the unit.






If your territory permits connection via a plug and socket, do not over load the socket.

Prohibition

If permitted and using a plug ensure it is fully and firmly plugged in.

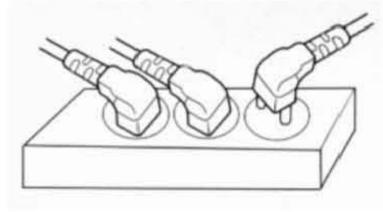

Safety alarm & Attention Product characteristic

Marning



Attention low temperature burn


Low temperature burn maybe resulted if it contacts the skin in low temperature for a long time. The group of child, old, weak, sick and disabled can use it after adjusting the toilet seat temperature, water temperature and ovendried temperature (lower).

Please adjust the water temperature lower after using the high temperature for old, weak, child and skin sensitive group.

Don't connect water source of industrial consumption except domestic water pipe.

Prohibition

It may cause skin injury, dermatosis and product functional fault.

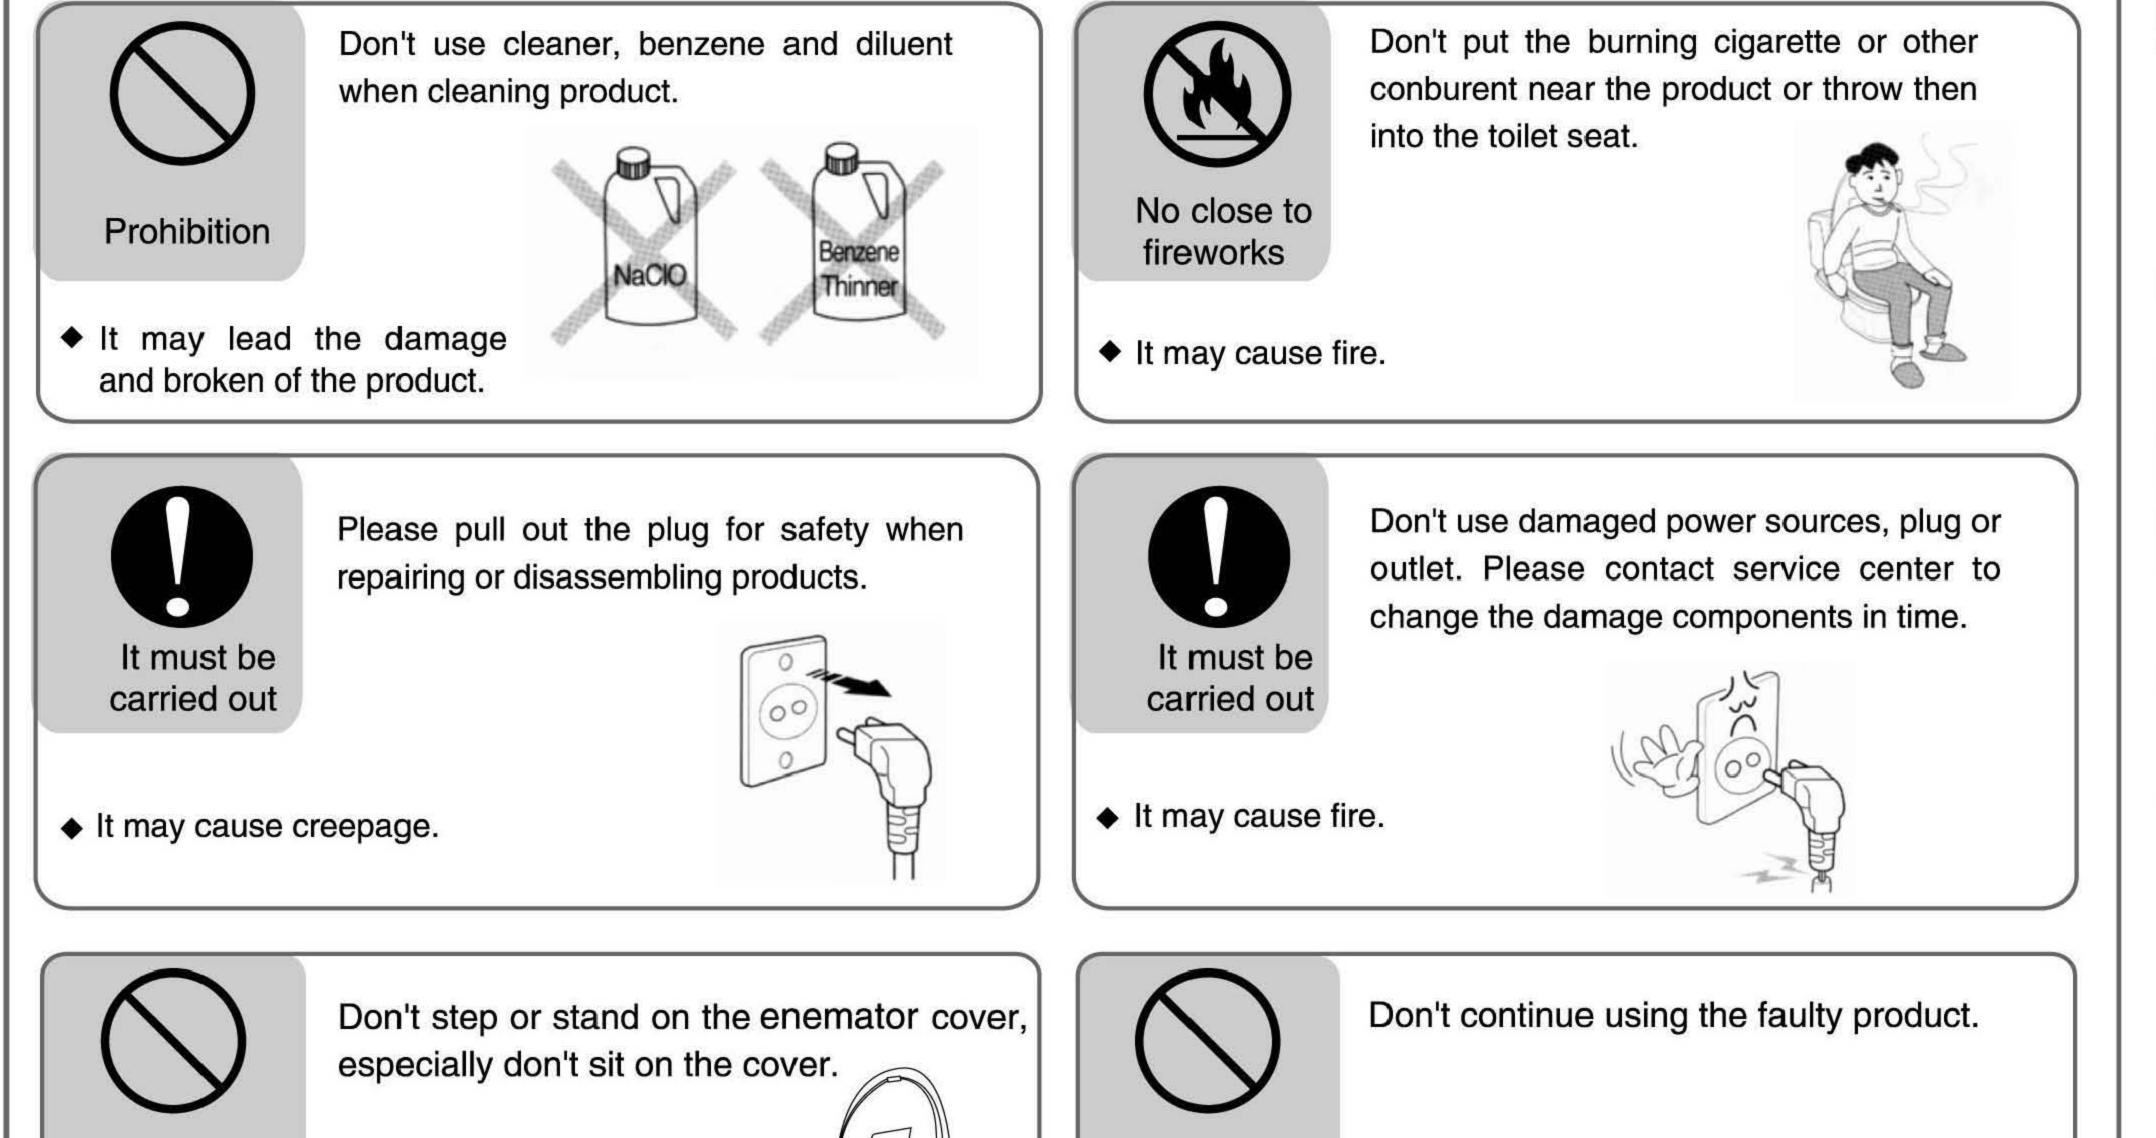


Prohibition



Prohibition

Don't step on the closestool cover, toilet circle and the other devices. It may break the product and result fault.

- It may cause fire or electric shock accident to continue using the faulty product.
- Please contact our factory or maintenance station to do the maintenance.

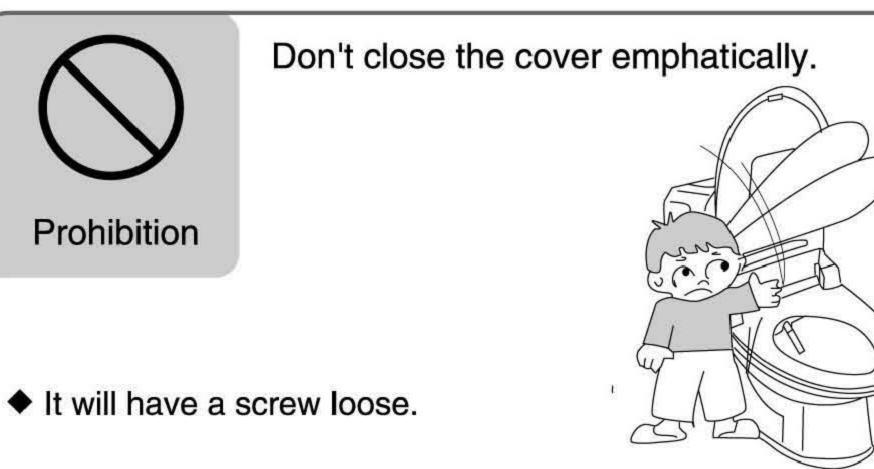

Don't use hand or things to cover the warm-wind outlet.


Prohibition

- It will cause burn.
- ◆ It will cause fire or electric shock.





N prohibition

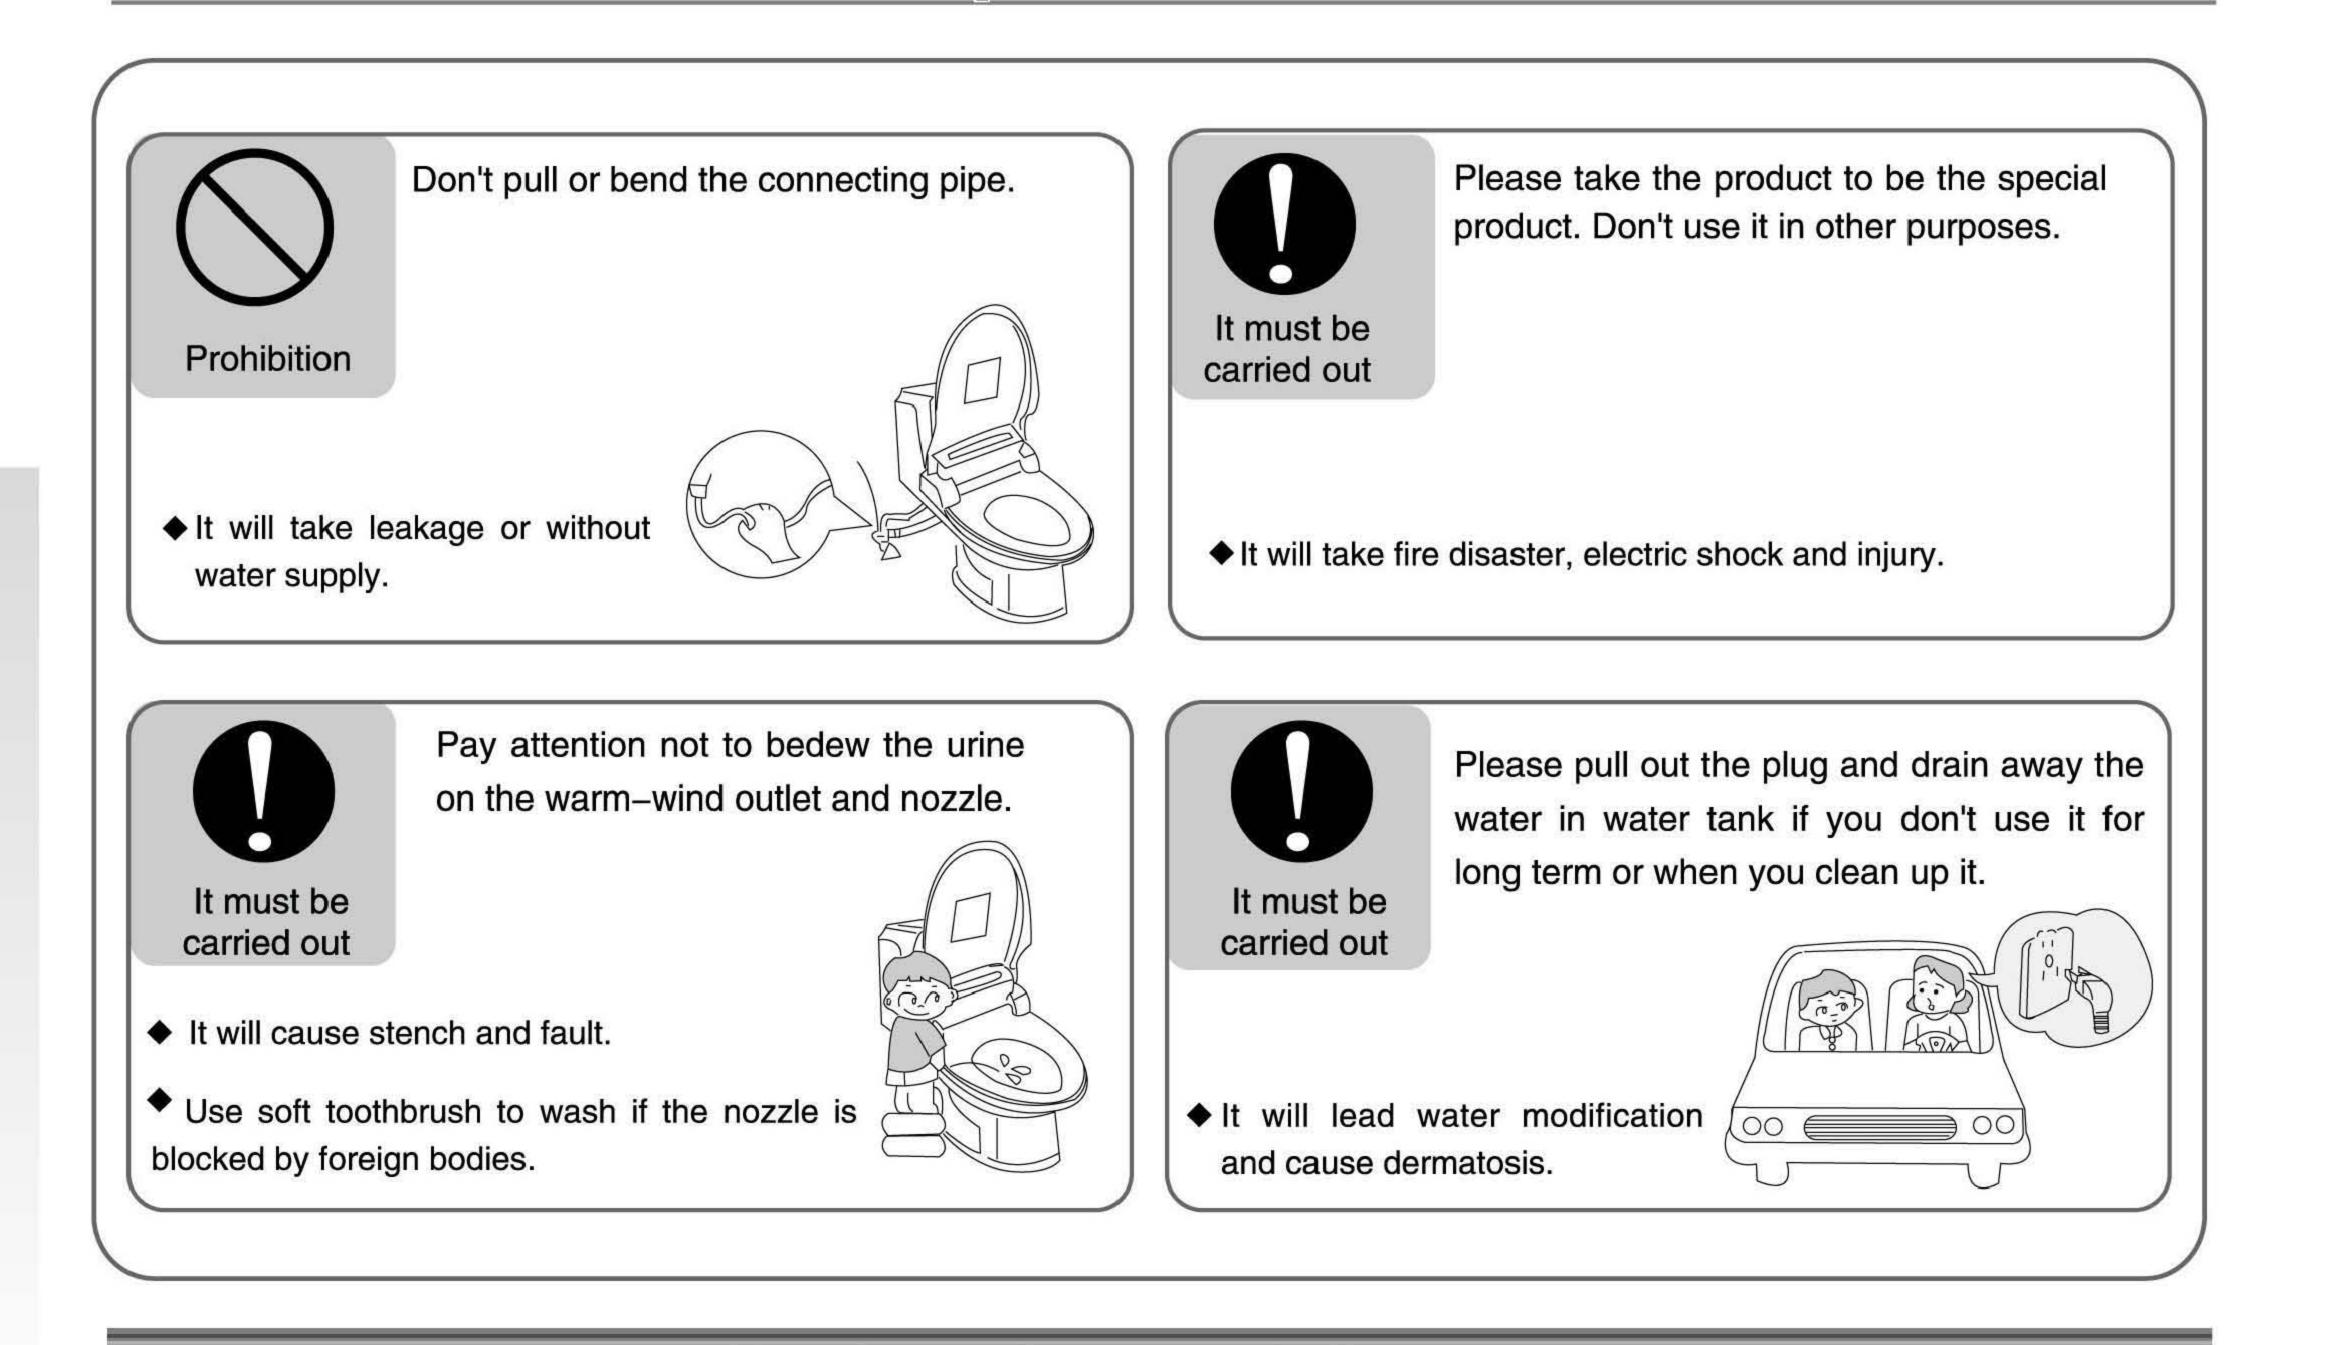

Product characteristic

3

- Electricity conservation of artificial intelligence
 The product has the function of power saving according to using period to set, which can help you to free from the electricity bill.
- Omnibearing Cleaning

Night lighting

When the environmental light is dark, the night light automatically turn on to provide soft lighting.

Adjust the position of nozzle

The place of nozzle, cleaning and catharsis can be

In order to enjoy omnibearing cleaning you can move the nozzle from back and forth.

- Strength water pump of low voice in the product
 The strength pump of low voice in the product can ensure
 the superior function in lowwater pressure position.
- Massage and cleaning function

The product with the function of massage for the automatic cycle can adjust the water pressure. It can use the strong and weak overlapping water pressure to improve the blood cycle.

Laxative function

The product has unique laxative function which concentrates water columns to play laxative function surprisingly.

adjusted back and forth according to user's body figure.

Use the inductive switch


The inductive switch will not start until sitting on the toilet seat. So it can avoid the accidentally start by children when they are playing.

Convenient installation


The product adopts mounting technique of separate type so that the installation and disassembly is simple and easy to be cleaned. You will not worry even if move often.

 Deodorant function (Except WN–970C) he strong deodorizer in the product can eliminate odor after use.(except WN–970C)


Product structure and name

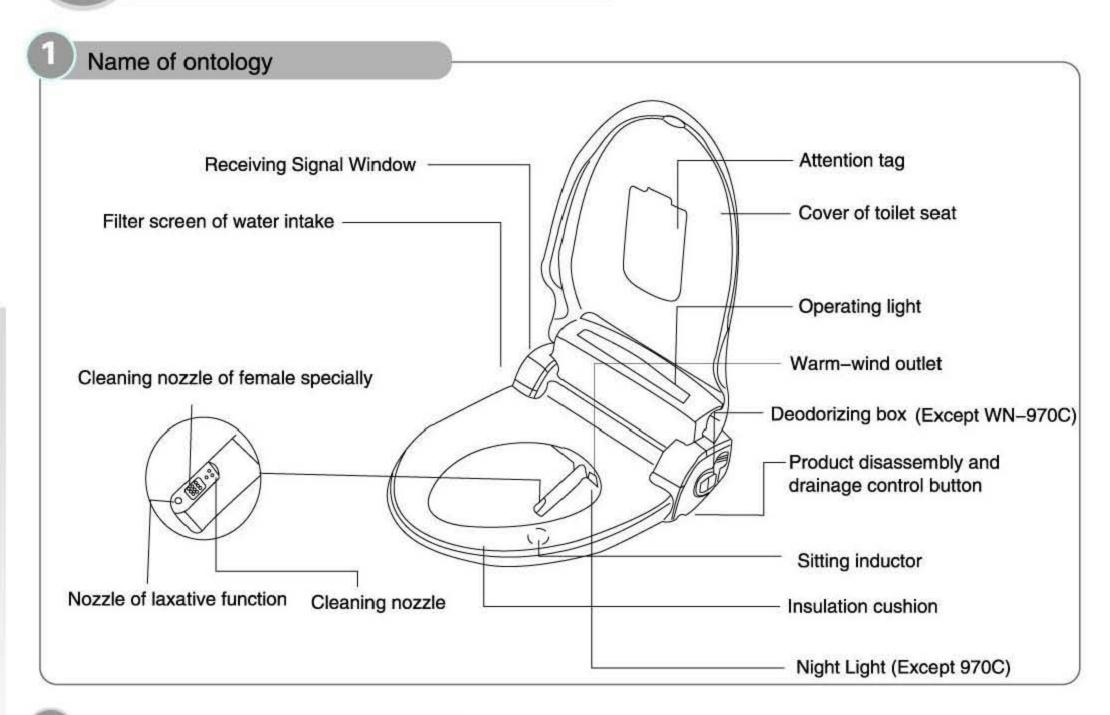

2 Accessory of	devices			
		Two rubber screw		
Triple valve	I riple valve			
	Two fixed screw rod	One intake pipe		

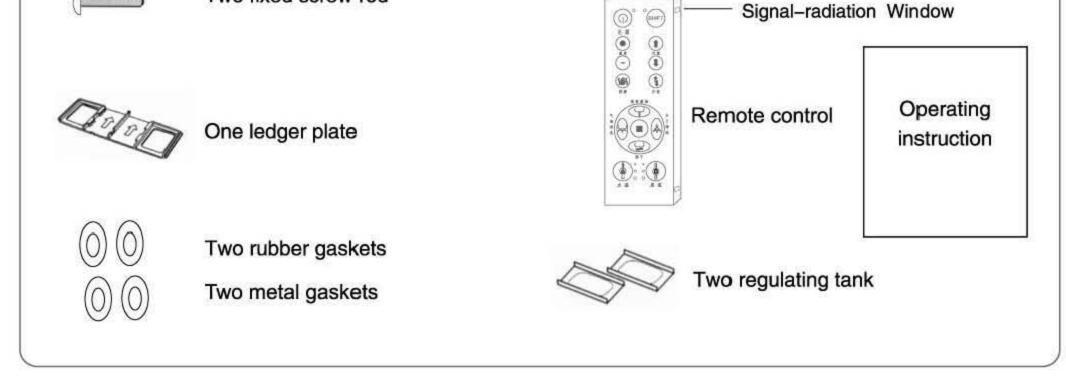




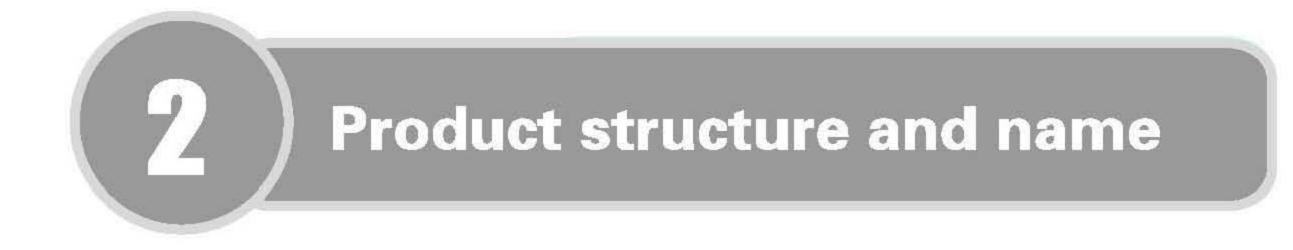

Work light indicator drop



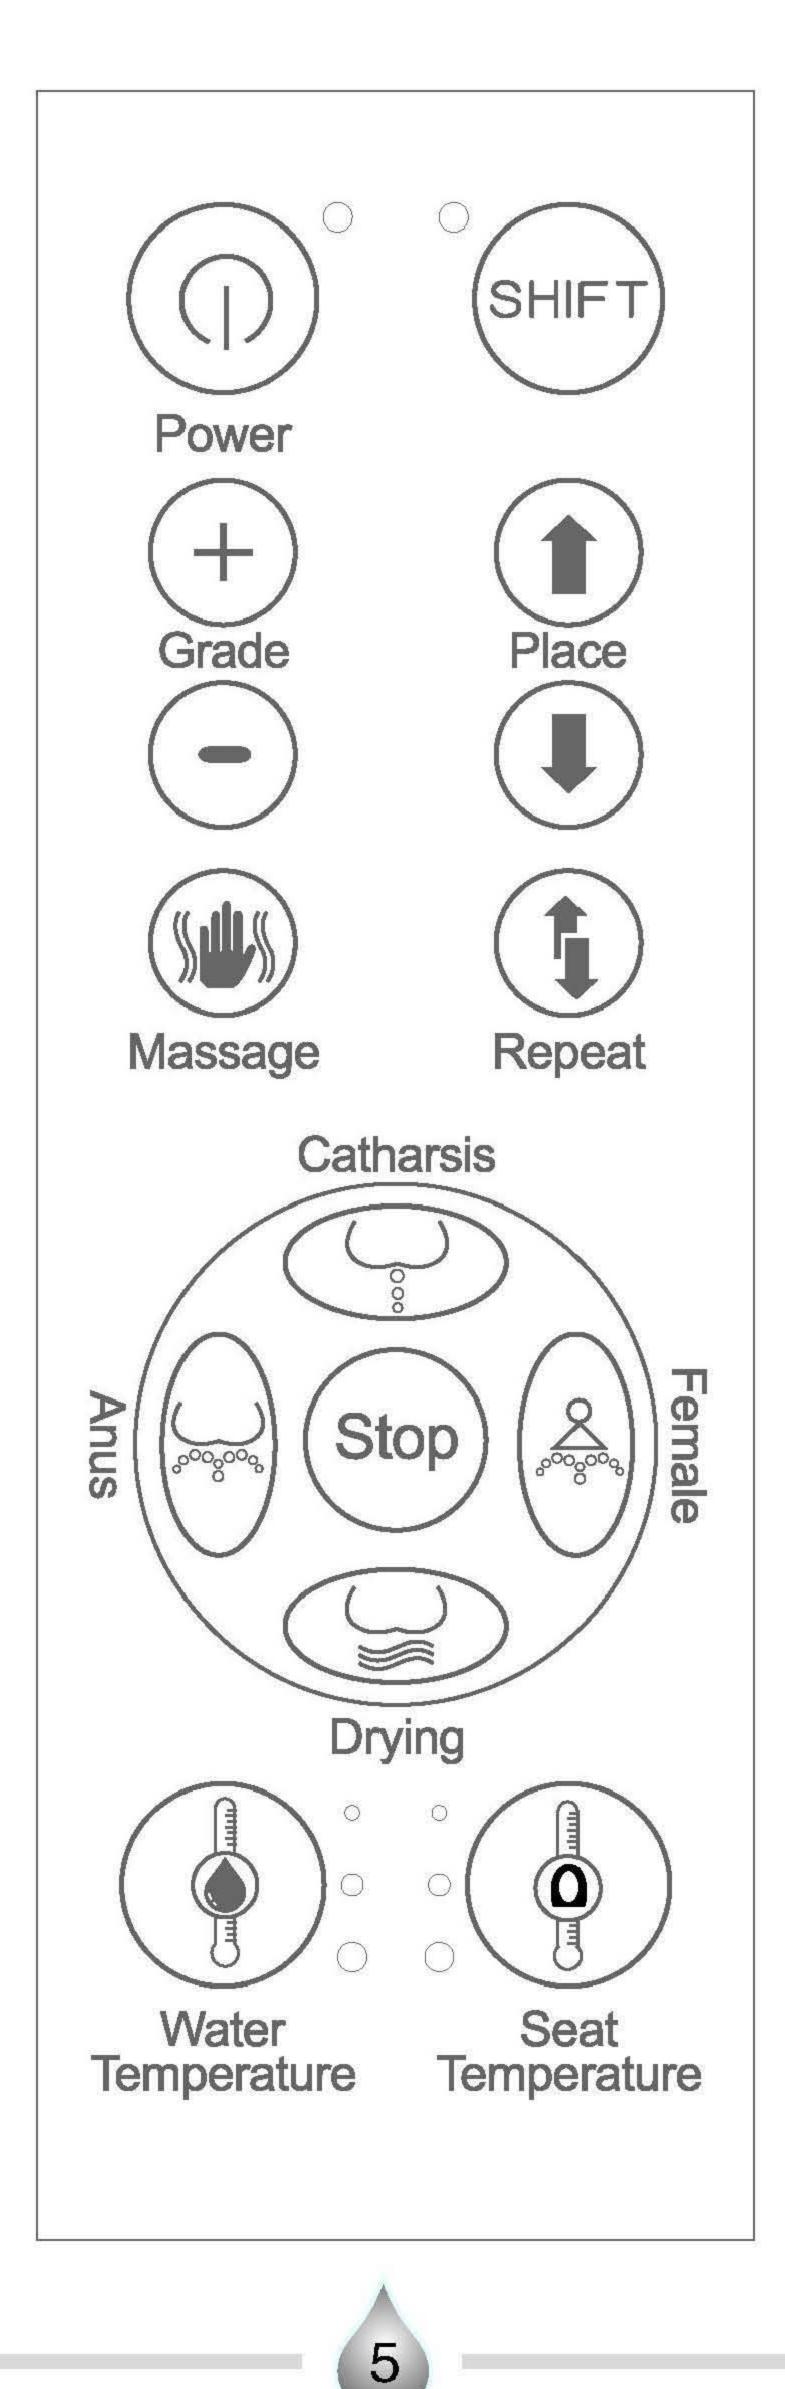



Plug in the power


- Plug the power, after the fickering of the indicator light on the working light indicator board, you will hear a long (Drip) sound, the machine is in standby status.
- Press the (Power) button on the remote control, the machine will send a (Drip) short sound, at the same time the (Power) indicator light will be on.

Sit on the toilet seat

- When sitting on seat, sensor indicator light on the working light indicator board will be on, you can hear a (Drip) at the same time, deodorization function will start automatically.
- If you left the seat, drying function will stop automatically after two minutes.
- Don't sit slantways toilet seat but sit in the center (the wrong sitting position will influence the normal operation of the induction switch and cause the irregular feed working of every function)

Adjust water temperature

Press (Water Temperature) button to agjust the water temperature, the water temperature indicator light will change circularly.

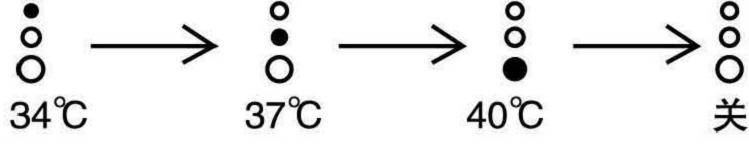

Adjust the toilet seat temperature

Press "Seat Temperature" button to adjust seat temperature. The seat temperature indicator light will change circularly.

$$\overset{\circ}{\underset{34^{\circ}}{\longrightarrow}} \overset{\circ}{\underset{38^{\circ}}{\longrightarrow}} \overset{\circ}{\underset{40^{\circ}}{\longrightarrow}} \overset{\circ}{\underset{40^{\circ}}{\longrightarrow}} \overset{\circ}{\underset{\times}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\longrightarrow}} \overset{\circ}{\underset{\times}{\overset{\ast}{\overset}{\overset}{\underset{\times}{\overset}{\overset}{\underset{\times}{\overset}{\overset}{\underset{\times}{\overset}{\overset}{\underset}{\overset}{\underset}{\overset}{\underset}{\overset}{\underset}{\overset}{\overset}{\underset}{\overset}{\underset}{\overset}{\overset}{\underset}{\overset$$

Press (cleaning), (female cleaning), or (catharsis) button

- Respectively press(Washing),(Lady Washing) and (Catharsis)functions,each function will be started.Press (Stop)button, each function will be stoped.
- If you do not press (Stop) button, each function will stop automatically after one minute.
- When leaving the seat, each function will stop automatically.
- The long-time working(cleaning, catharsis and female special cleaning) will lower the water temperature. It must be stopped when the water become cold. The product can provide hot water about two minutes later.

Adjust the water pressure

• You can press (\oplus or \bigcirc) of the pressure button respectively to adjust the water pressure when you use washing, lady washing and catharsis functions.

Using method (Functional regulation & the usage)


Adjust nozzle place

The correct usage of catharsis function

The first stage

Please press catharsis button to make watercourse to align the central anus when you use, and then use the "strength" Select button (\bigoplus or \bigcirc)to adjust the increase or decrease of the water pressure.



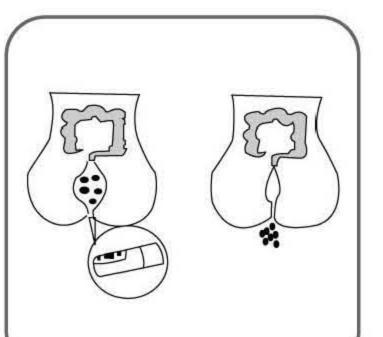

The second stage.

After the water spray into the rectum and keep it in rectum for a while, and then exert yourself to eliminate the feces and exhaust gas.

\Box	

Water column aims anus correctly

pouring in … discharging



If the water column doesn't aim at the center of anus, you may feel pain and it will splash water.



The user, who is ill with anus diseases as hemorrhoids, has the phenomenon of haemorrhage or pain when beginning to use. But this phenomenon will disappear two – three days later.

Press (dry) key

- ◆ Press (dry) button, drying fuction will start to work.Press "strength"button(⊕ and ⊖)to adjust the increase and decrease of the warm-air drying temperature.Press "stop" button, this fuction will stop after two senconds.
- If you do not press (Stop) button, drying function will stop automatically after two minutes.
- If you left the seat, drying function will stop automatically.

Massage clean

Pressing (massage) button during the cleaning procession, the massage will be on in strong and weak alternative water pressure.

When using massage function, press (massage) again, massage function will stop.

Reciprocating clean

- The nozzle will shuttle and enlarge the cleaning scope when you press the (reciprocation) button in cleaning process.
- It will stop moving if you press (reciprocation) button once again when it is moving.

Power saving

• The temperature of the water and seat will be keeped in 32 centigrade if without using in 12 hours.

It will automatically turn off if without using in 24 hours.

Using method

Automatic Night Lighting Function

• When the environmental light is dark, the night light automatically turn on to provide soft lighting.

Automatic Deodorant Function

When someone seated, the deodorant function automatically open. When people leave for two minutes, deodorant function will be closed. If you do not want to use deodorant function, please press "shift + temperature" button when nobody is sitting on it, when hearing a long "Drip" sound, the deodorant function will be closed. For open automatic deodorizing, press "shift + temperature" when nobody is sitting on it, when hearing a short "drip" sound, the deodorant function on it, when hearing a short "drip" sound, the deodorant function will be closed.

Automatic Reciprocating Function

- Press "shift+repeat" button when nobody is sitting on it, after hearing short "drip", automatic reciprocate function is open.
- Press "shift+repeat" again, after hearing long "drip" sound, automatic repeat function is closed.
- When automatic repeat function is open, when you use "washing" and "lady washing", repeat function will be open autoamtically.


Automatic Massage Function

- When nobody sitting on the seat, press "shift+massage" button, after hearing short "drip" sound, automatic massage will be open.
- ◆ Press "shift+massage" again, when hearing long "drip" sound, automatic massage function will be closed.
- When the automatic massage function is open, when using "washing", "lady washing" and "catharsis", massage function will open autoamtically.




Attentions before installation

- Before installation, please check the if the voltage of this product conforms to the local voltage.
- Before the installation, you can not connect the power absolutely.

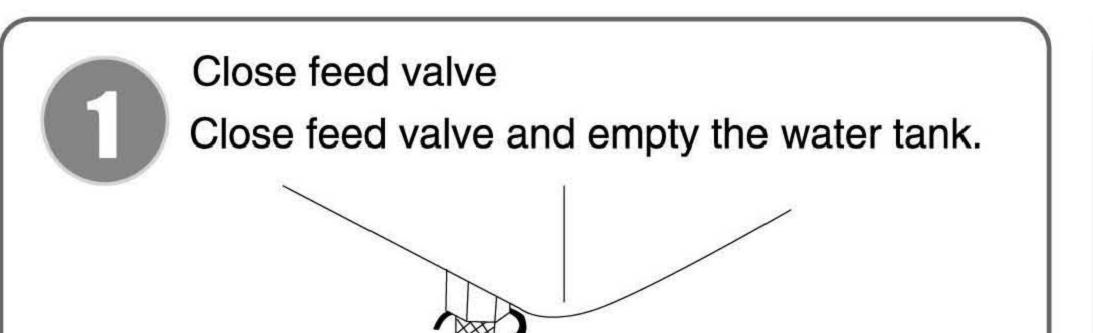




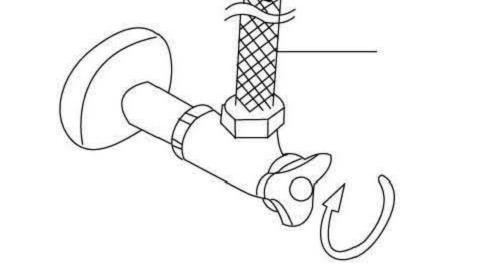


Use spanner to dismantle the original potable water pipe which connects the feed valve.


Unscrew the screws which fixes the closestool cover. Dismantle the closestool cover as the picture.

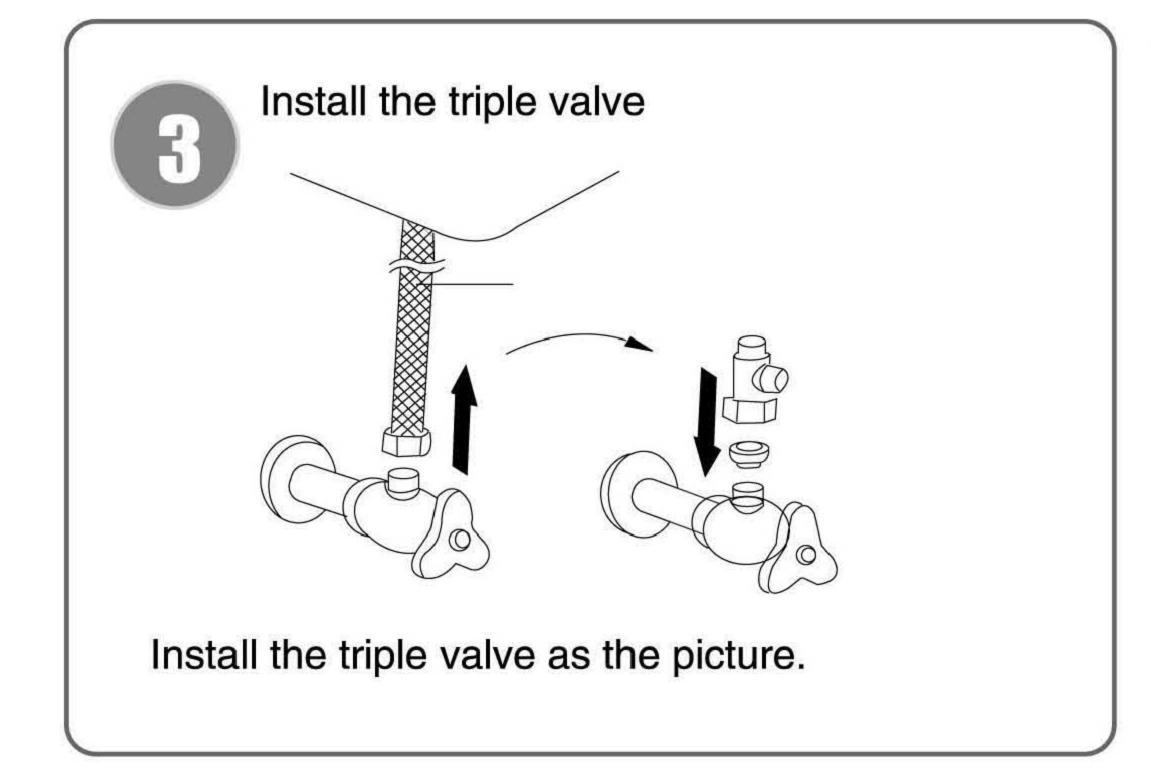


Connect the potable water pipe with water tank.

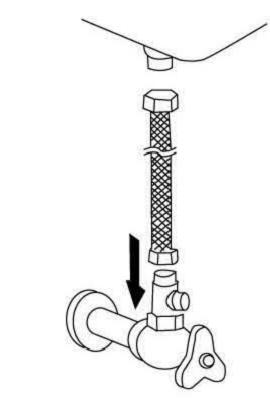

Use original potable water pipe to connect the triple valve and water tank respectively.

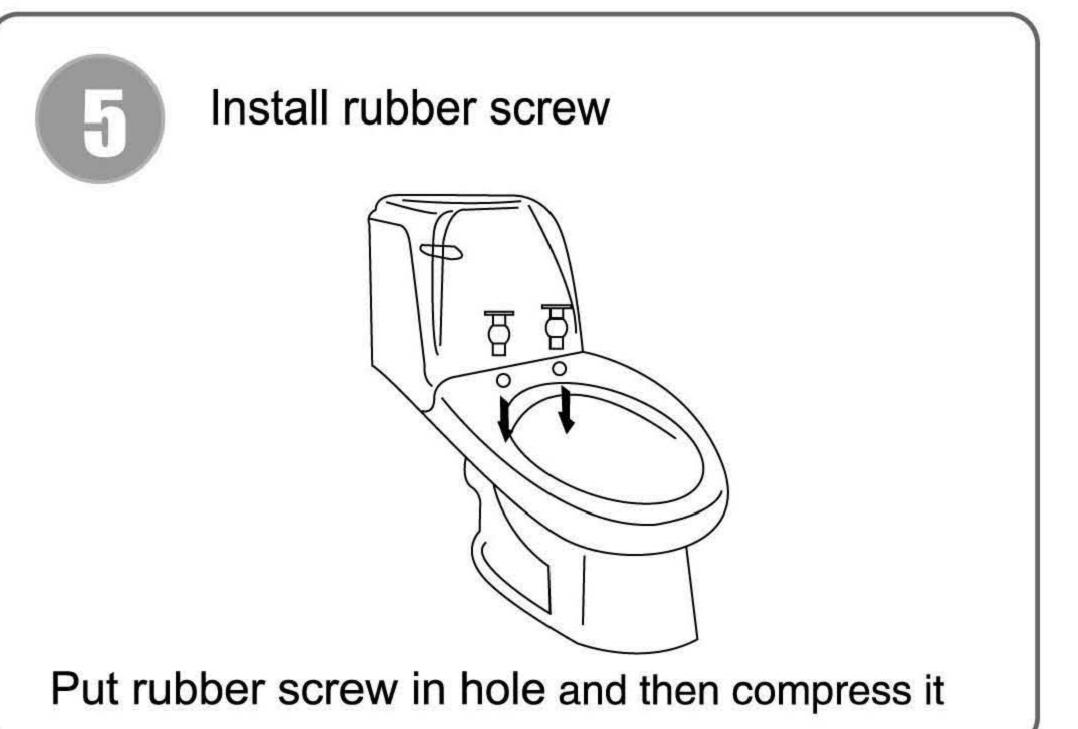

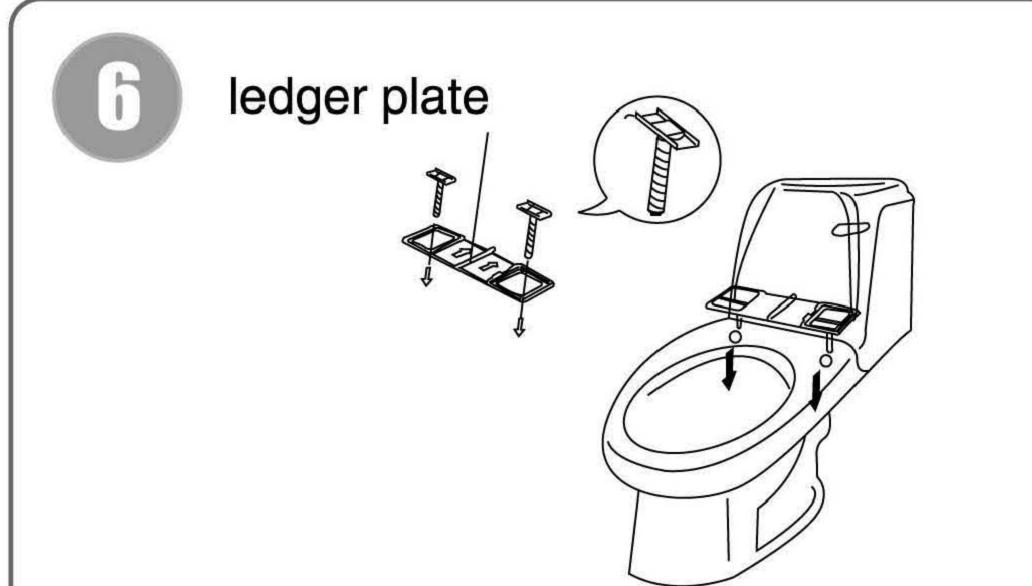


Screwing the stainless steel bolt into rubber bolt hole by passing through the adjustment slot

Methods of installation.


Regulate and fix bidet

slide bidet into the groove until locked

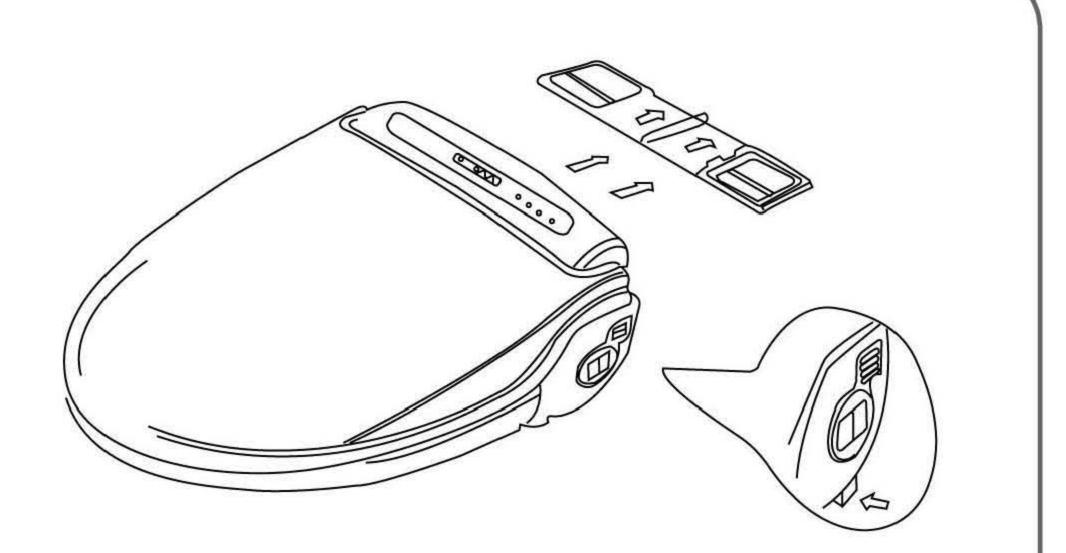

Switch the water hose in bidet


- * Connect one end of the water hose to the three-way valve.
- * Open the inflow valve faintly to make the water out flow from the water hose, then close the inlet valve.
- * Connect the other end of the water hose to the bidet as the picture.
- \star Open the inflow valve.
- ★ Plug in the power , press the "Power" button, the power indicator light on the working light indicator board will be on, at this time the water tank will start inflow. Start water. The "heating" indicator light on the working light indicator board will flicker during the inflow and accompanied by ticktack tweet, when the flicking and tweet stops, it indicates that the water tank has finished the inflow.
- ★ The installation of bidet is off. Welcome to use it.

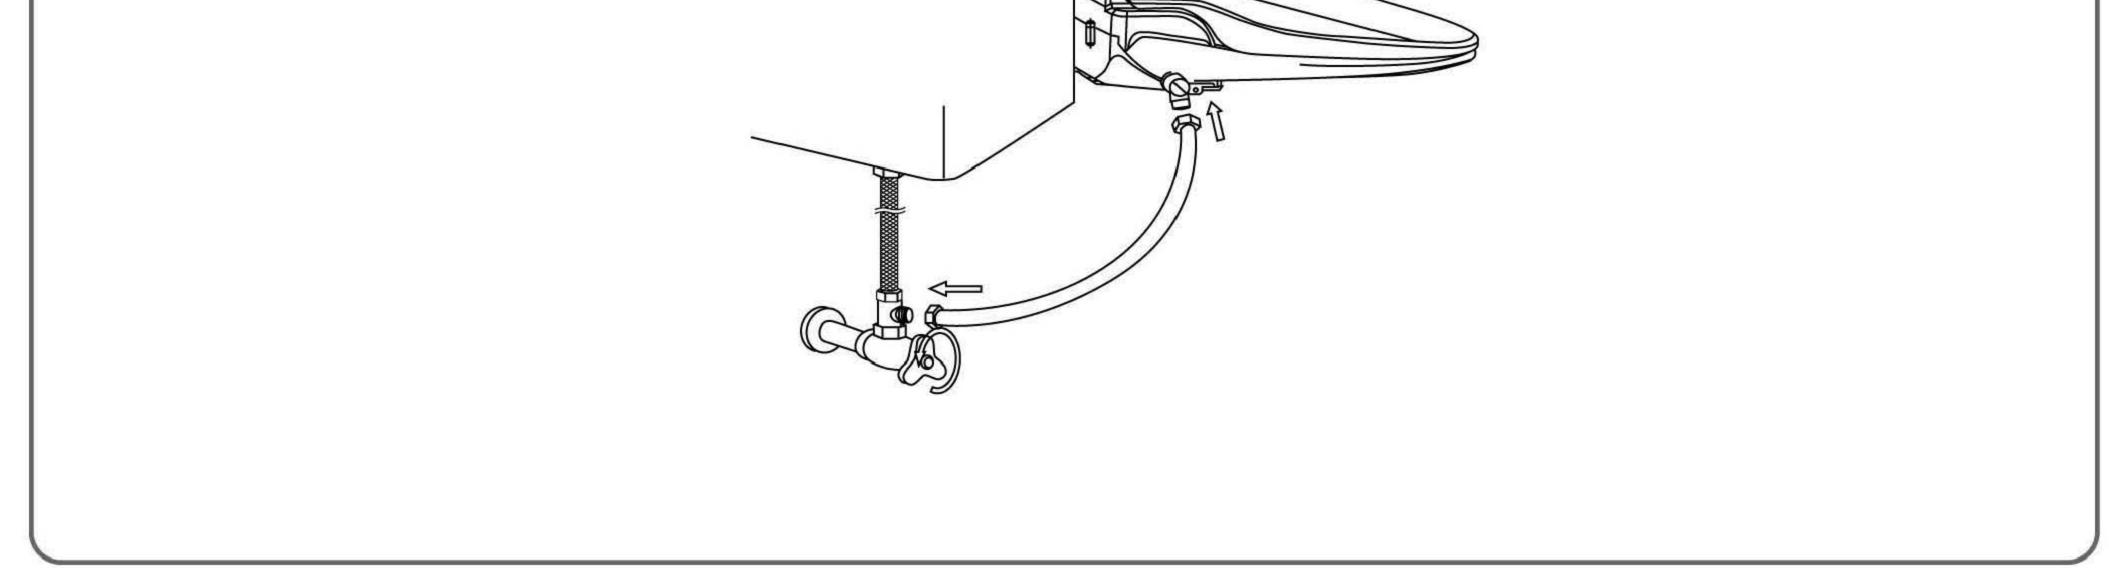

The dismantlement of product

When you have to disassemble the machine because of moving house and clearing, please follow the next steps;

- Pull out the power plug.
- Cut off the supply valve in clockwise direction.
- Press on the side of the drainage button, completely remove the water in the storage water tank.
- Pull the toilet seat slightly, in the meantime press the sided fixed button of the machine(arrow), that will make the machine separate from the ledger plate.

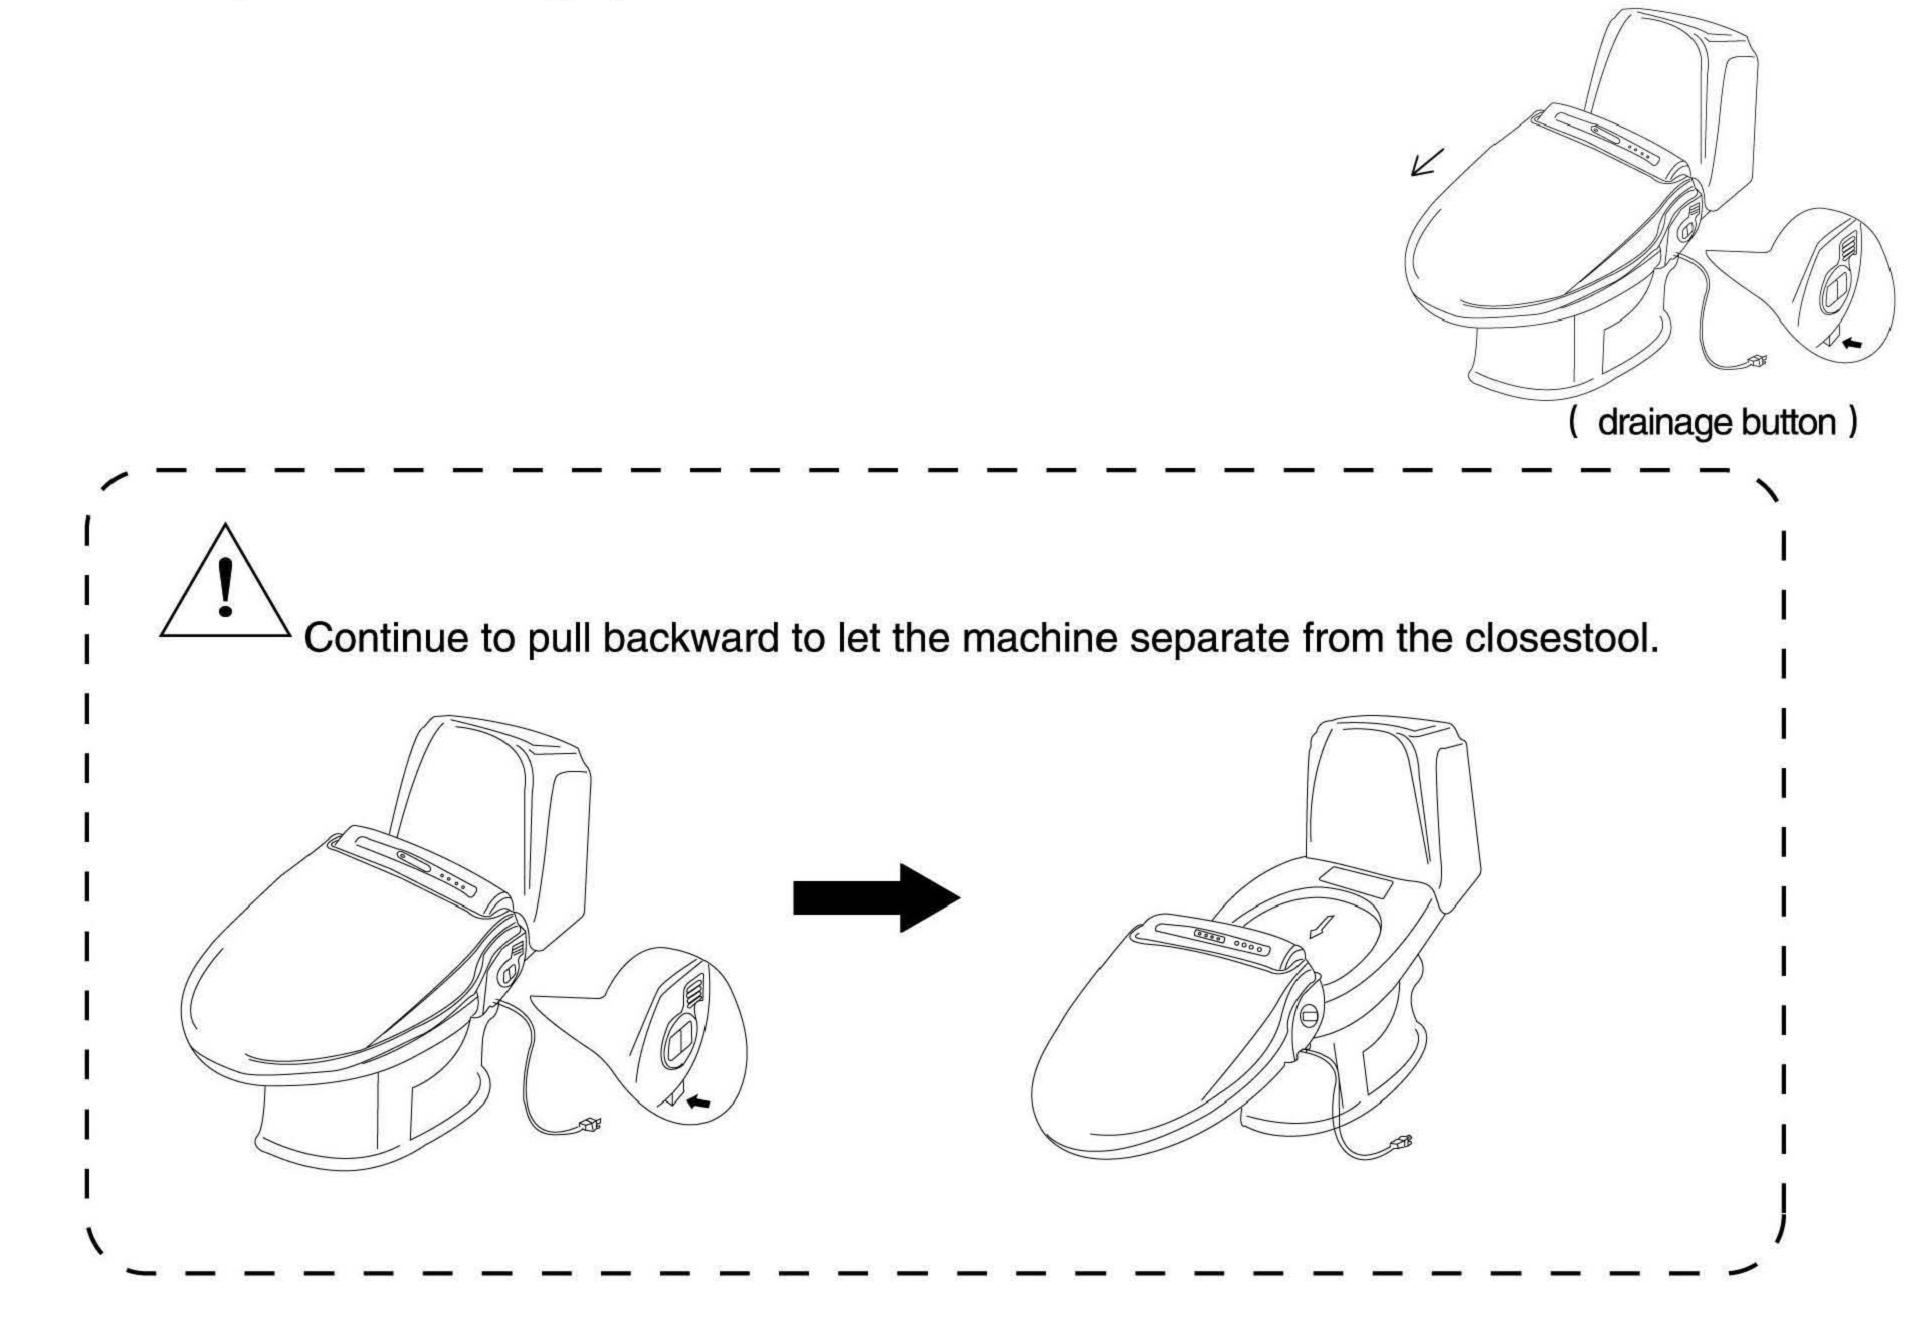

Untie the water pipe which is connected the machine and disassemble water-nurse according to the next steps.



6

Separate water pipe and triple valve of bidet and closestool.

Connect the undone feed pipe when installing bidet and turn on the supply valve in anticlockwise direction. Be assure that there is no leakage in the part of feed pipe.


Please disassemble bidet and cover before installing electronic toilet seat .

The four items above are the disassembled method as general clearing. The following seven items are the disassembled method of moving houses, etc.



Manual cleaning nozzle

- The nozzle will stretch out if pressing (shift+washing) button (don't sit on bidet at this time).
- Press (shift+washing)button and nozzle will return to original state and clean automatically after brush it by toothbrush.

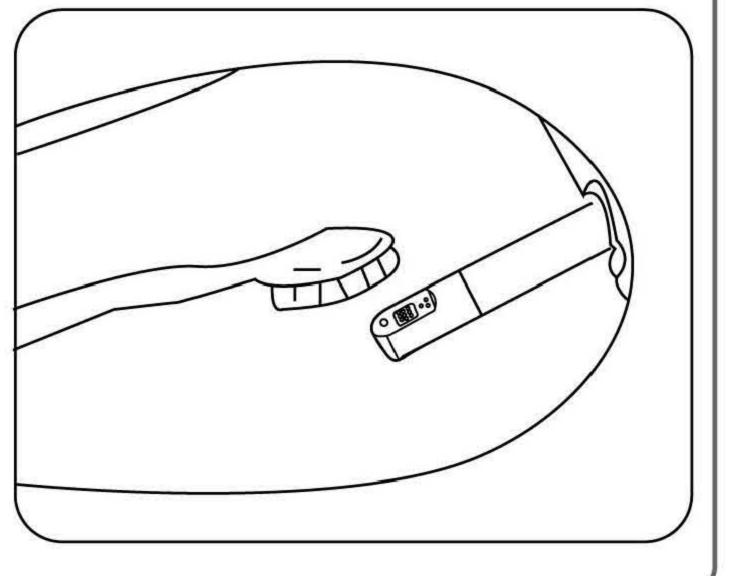




Clean inhalant siphon filter

1) Close the supply valve first.

 Rotating filter end cover counterclockwise, washed with water and then restore it. At last screw the end cover clockwise.

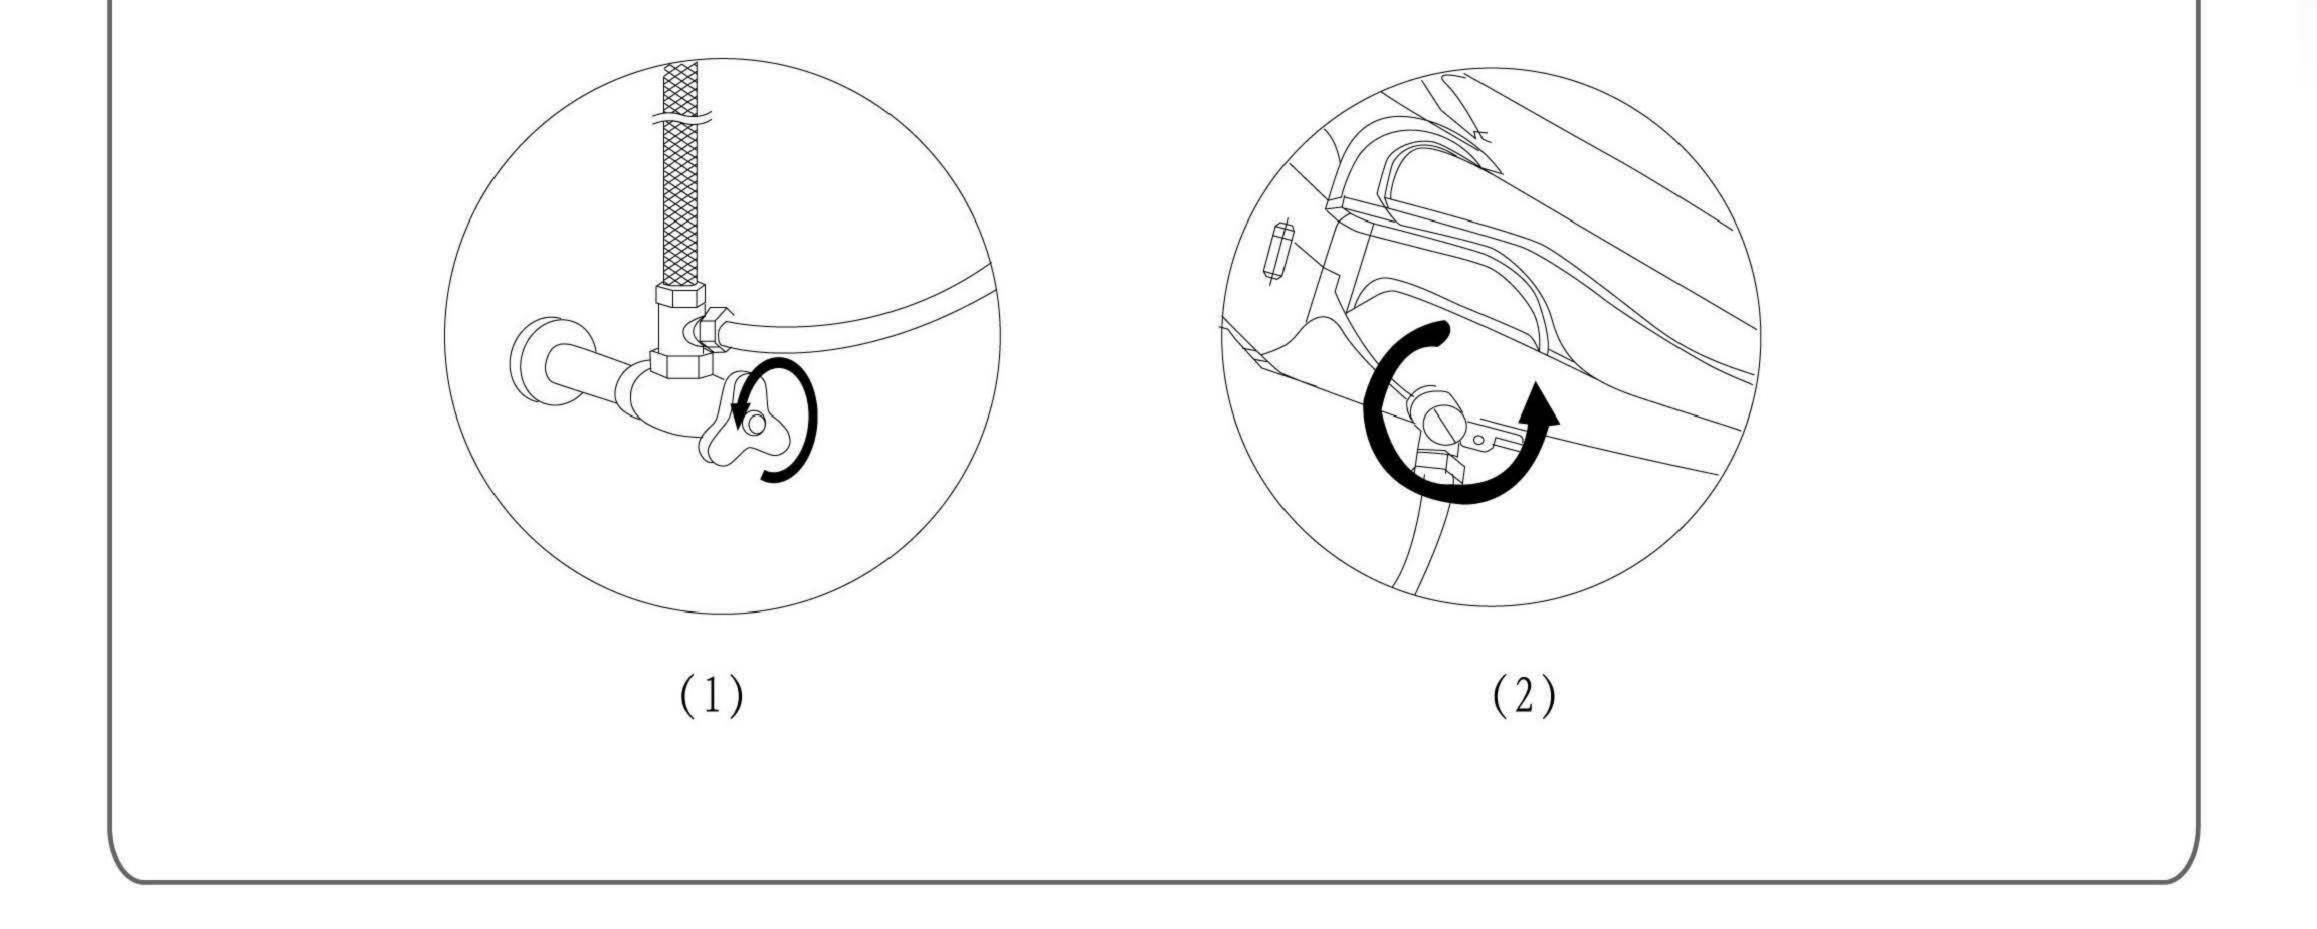





Check the following items before consigning maintaince service

Condition	Possible reason
The nozzle can't spray out water.	Temporary water failure The water valve has been closed; The water filter has been blocked;
Inoperative state	Don't switch the plug well. The "Power" button of the remote control is not open The toilet seat will do not work if you do not sit on it.
Leakage	Triple valve of water duct chain is not in good toilet seat has't been inster closely and locked(need hearing "Clatter"sound) water filtering net blocking;
Under pressure	Adjust the water pressure,according indicator light. check if the filtering net is blocked
Water temperature, toilet seat and the drying is not hot enough the drying is not hot enough	Check the every temperature setting.

Buzzer alarming

Water tank is shortage of water

13

Check whether the inflow valve has been open

Check whether the water supply has been cut off

Check whether the water pressure is too low or the filter has been blocked

Product specification

Service voltage	C AC110V C AC220V 50HZ/60HZ			
Electric power consumption	□ AC110V 660W □ AC230V 720W			
The length of power source	1.7M			
The scope of water pressure	0.4-4.5 Kgf/cm ²			
Product size	495mm(W) *480mm(L) *185mm(H) 495mm(W) *525mm(L) *185mm(H)			
Weight	5.5kg/6.0kg			
Installation accessories	T-junction, soft permeable pipe, threaded rod, washer			
Anus cleaning	Q 9 every minute			
relax the bowels forcefully	0.8 L every minute			
female cleaning	0.8L every minute			
to and fro cleaning method	12mm move the nozzle fro-to-back during the scope of 12mm			
the cleaning method of massage	strong-and-weak water column			
the control of nozzle place	adjust front and back freely			
the control of water pressure	water pressure of five adjustable states			
water temperature control	four adjustable state (normal, 34 centigrade, 37 centigrade, forty-one centigrade)			
volume of water tank	1.4L			
the heating power of water tank	600-watt			
safety device	water temperature inductor, overheat production, temperature fuse			
electric consumption of drying	250-watt			
drying temperature	five adjustable state			
drying security	temperature inductor, overheat production, temperature fuse			
the electric consumption of temperature toilet seat.	fifty-watt			
the temperature control of toilet seat	four adjustable states: normal 34 centigrade, 37 centigrade, forty-one centigrade			
the toilet-set security	temperature inductor, temperature fuse			
the delaying device	soft-land toilet seat			





Customer patronage

Quality Warranty

Thank you for purchasing our products, we promise ro safeguard your right as the folowings:

If you find any quality problem about our products, please contact purchase place or contact our After-sale Service Department directly.

Production No.	Item No.	WN-990 ()			
	item ino.	WN-990 ()			

Purchasing Date		Ins	tallation Date	Э		
Signature of Service Staff		Ho	otline			
Term of Warranty:	Within one year from the date of purchase					
	First Time		Second Tim	e	Third Time	
Maintenance Record	Date:	Signature:	Date:	Signature:	Date:	Signature:
	Forth Time		Fifth Time		Sixth Time	
	Date:	Signature:	Date:	Signature:	Date:	Signature:

Items of the quality warranty

Please fill in the product warranty carefully when you buy this product and safekeeping it.

If the product is out of order during the warranty period and under normal use situation, We will maintain for free.

The charges which is collected in maintainance period but belongs to paid service is as follows:

Maintenance fee + Accessory fee + Travel allowance

paid maintaince services

Fault caused by not operate according to the instruction

Faults because of unauthorized disassembling or remodeling

The maintenances which are caused by some disasters such as fire disaster, gas, flood, earthquake,

thunders, ect and abnorma voltage.

Fault cased in the transportation

Move the machine to another place to intall according to client's request.

Warranty period has expired

The service life of consumptive part is over(such as rubber gaskets, filter, deodorization ect).





